


ENCASE SURROUND FIREPLACE MANTEL

Model # : 90000, 90001, 90014

ASSEMBLY INSTRUCTIONS

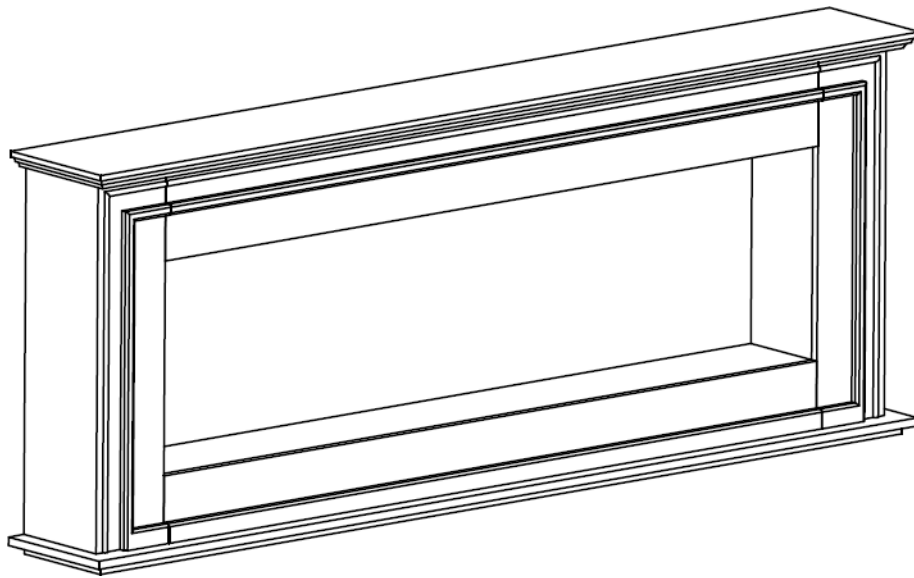

90000 – Encase 40” Forte® Elite Mantel

90001 - Encase 50” Sideline® Elite Mantel

90014 - Encase 60” Sideline® Elite Mantel

WARNING

Read and understand this entire owner's manual, including **all safety information**, before **assembling** or **using** this product. Failure to do so could result in **serious personal injury**.

CAUTION

Keep this owner's manual for future reference. If you sell or give this product away, **make sure this manual accompanies this product**.



**PREMIUM
ELECTRIC FIREPLACES
& TV LIFTS**

Exceeding Expectations



Table of Contents

Contents

Dimensional Drawings 5

 90000 - Encase 40" Forte® Elite Mantel..... 5

 90001 - Encase 50" Sideline® Elite Mantel..... 6

 90014 - Encase 60" Sideline® Elite Mantel..... 7

Unpacking Your Mantel..... 8

Assembly Instructions 9

Securing Mantel to Wall 16

Installation of Fireplace In Encase Surround Mantel 19


Warranty 20

IMPORTANT SAFETY INFORMATION WARNING!

- Before assembly, carefully use scissors or utility knife to cut and unwrap all parts. **DO NOT DISCARD ANY HARDWARE!**
- Use care assembling your new mantel. Take your time and use the hardware provided. Never overtighten bolts.
- All panels are labeled left and right as viewed from the front of the unit.
- Serious or fatal crushing injuries can occur from furniture tip-over. Always secure this furniture to the wall using the tip-over restraints provided.
- **DO NOT** place TV or other **HEAVY** objects on top of this product.
- **NEVER** let children climb or hang on this product.
- **DO NOT** use this product outdoors.
- Please **READ** and **UNDERSTAND** the manual for the electric fireplace that is used in conjunction with this mantel. **FOLLOW INSTRUCTIONS** for the electric fireplace as outlined in the electric fireplace manual.
- Front of fireplace and mantel should not be blocked when in use.

Dimensional Drawings

90000 - Encase 40" Forte® Elite Mantel

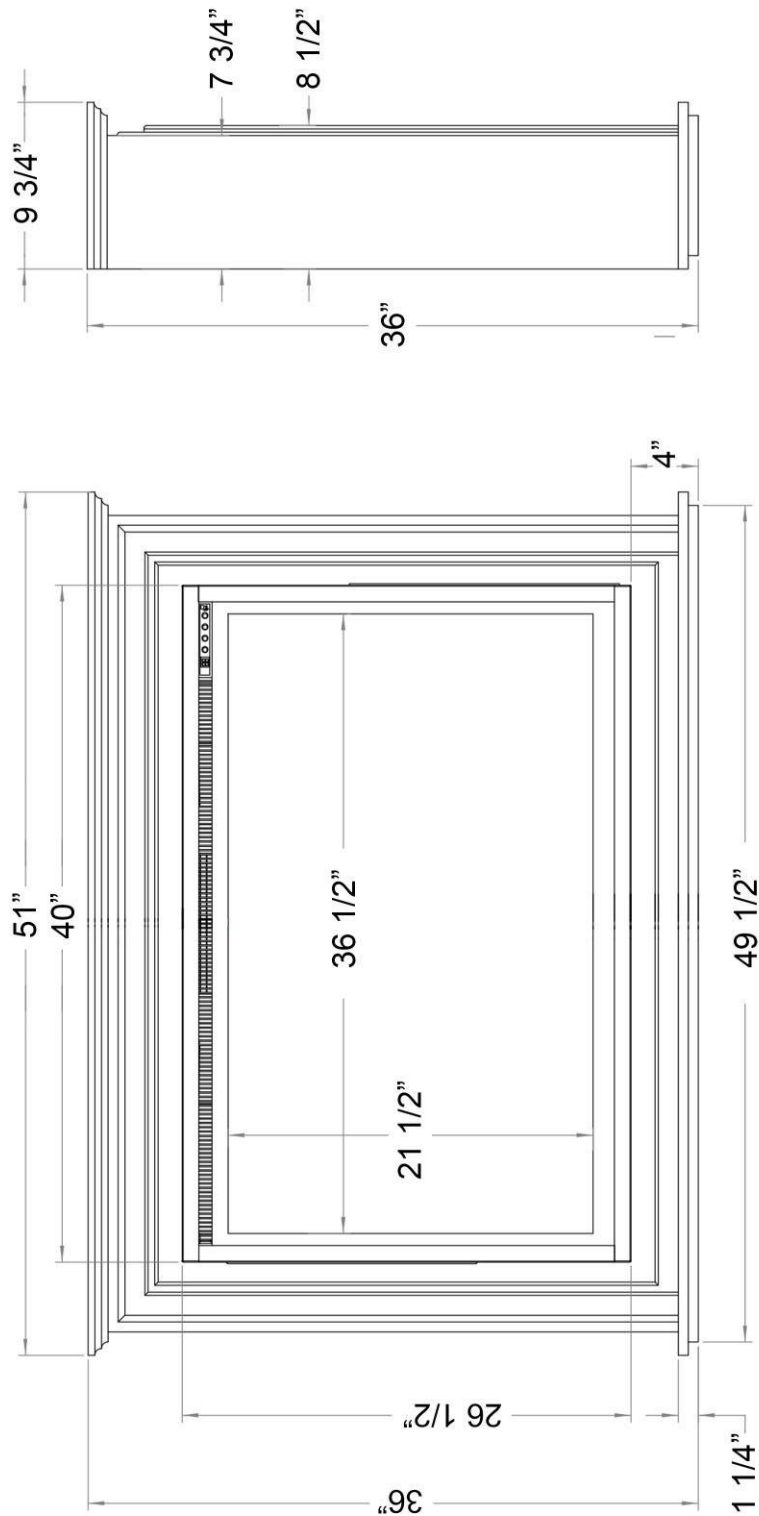


Encase 40" Forte Elite Mantel
PN: 90000



**PREMIUM
ELECTRIC FIREPLACES
& TV LIFTS**
Exceeding Expectations
Rev: 03/29/2022

- 90000 - Encase 40" Forte Elite Mantel:**
- Color: White Semi-Gloss
 - Material: MDF
 - Fireplace Compatibility: 80052 - Forte Elite 40"
 - Dimensions:
 - Width: 51"
 - Height: 36"
 - Depth: 9 3/4"

90001 - Encase 50" Sideline® Elite Mantel

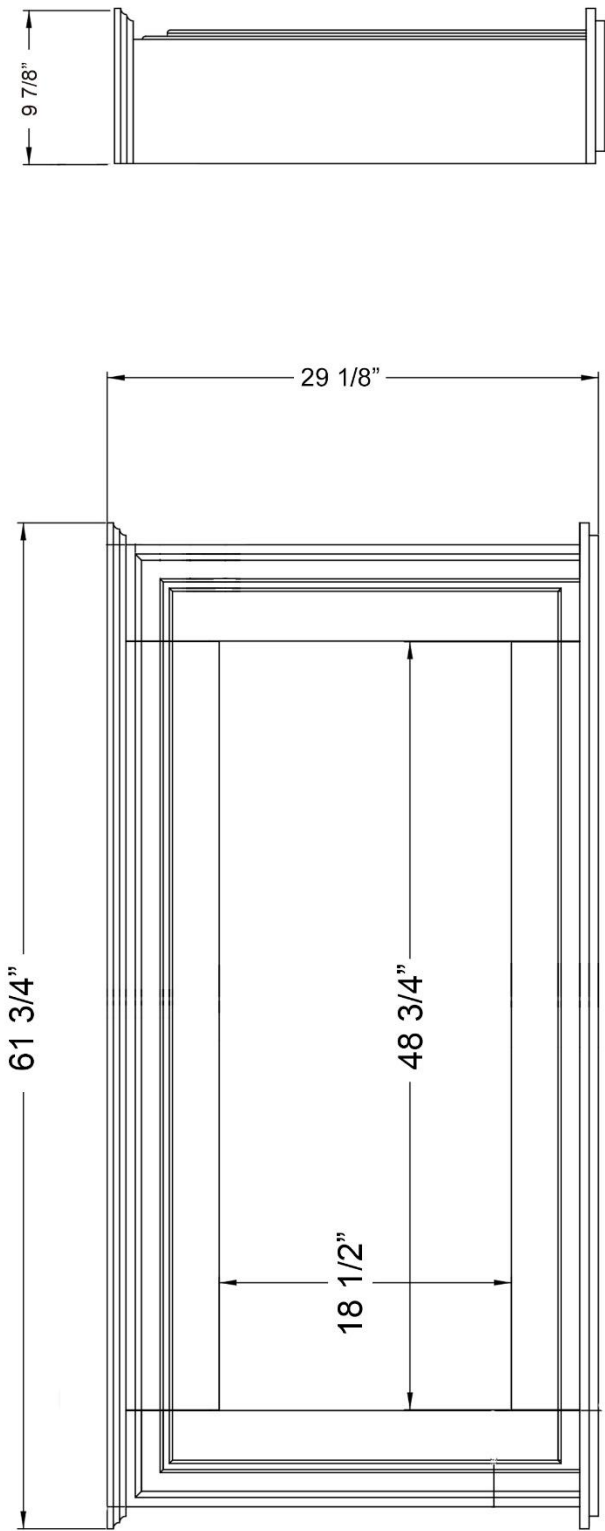

Encase 50" Sideline® Elite Mantel
PN: 90001




**PREMIUM
ELECTRIC FIREPLACES
& TV LIFTS**
Exceeding Expectations
Rev: 04/14/2025

- 90001 - Encase 50" Sideline® Elite Mantel:**
- Color: White Semi-Gloss
 - Fireplace Compatibility: 80036 Sideline® Elite 50"
80057 Sideline® Elite PRO 50"
 - Dimensions:
 - Width: 61 3/4"
 - Height: 29 1/8"
 - Depth: 9 7/8"

Encase Fireplace Mantel

90014 - Encase 60" Sideline® Elite Mantel

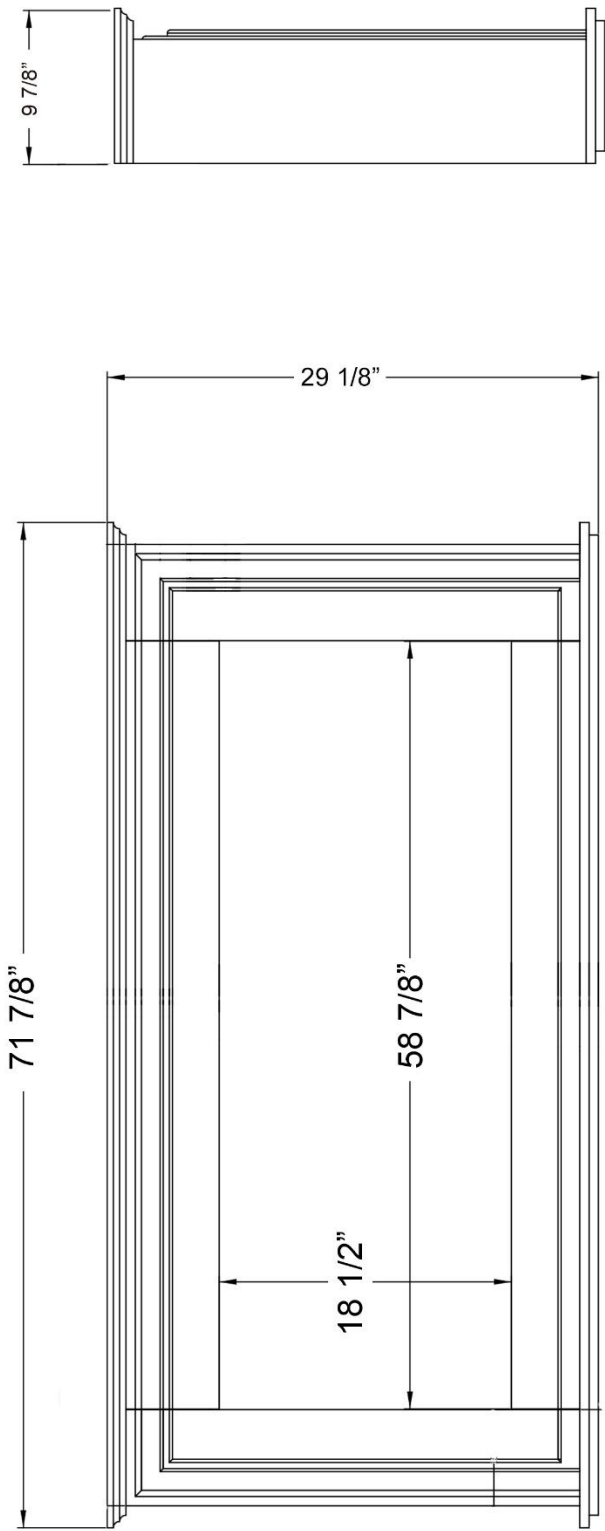

- 90014 - Encase 60" Sideline® Elite Mantel:**
- Color: White Semi-Gloss
 - Fireplace Compatibility: 80037 Sideline® Elite 60" 80058 Sideline® Elite PRO 60"
 - Dimensions:
 - Width: 71 7/8"
 - Height: 29 1/8"
 - Depth: 9 7/8"

Encase 60" Sideline® Elite Mantel
PN: 90014



**PREMIUM
ELECTRIC FIREPLACES
& TV LIFTS**
Exceeding Expectations

Rev: 04/14/2025




 















Unpacking Your Mantel

Parts and Hardware

Tools Required

- Phillips screwdriver
- Scissors or utility knife
- Cordless drill with Philips-Head bit

What's in the Box


<p>Top Panel</p> <p>(A) </p> <p>1 PC</p>	<p>Front Frame</p> <p>(B) </p> <p>1 PC</p>	<p>Left Side Panel</p> <p>(C) </p> <p>1 PC</p>	<p>Right Side Panel</p> <p>(D) </p> <p>1 PC</p>		
<p>Shelf</p> <p>(E) </p> <p>1 PC</p>	<p>Bottom Shelf</p> <p>(F) </p> <p>1 PC</p>	<p>Shelf support wood</p> <p>(G) </p> <p>2 PCS</p>	<p>Rear Support</p> <p>(H) </p> <p>90014 only 1 PC</p>		
<p>(1) Bolt (Ø1/4"×1-1/4")</p> <p></p> <p>90000, 90001: 23 pcs 90014: 27 pcs</p>	<p>(2) Spring Washer (6mm)</p> <p></p> <p>90000, 90001: 23 pcs 90014: 27 pcs</p>	<p>(3) Flat Washer (6×12mm)</p> <p></p> <p>90000, 90001: 23 pcs 90014: 27 pcs</p>	<p>(4) Allen Key (4mm)</p> <p></p> <p>1 PC</p>	<p>(5) Wooden Dowel (Ø8×30mm)</p> <p></p> <p>20 PCS</p>	
<p>(6) Screw (#8×1-1/4")</p> <p></p> <p>6 PCS</p>	<p>(7) Plastic Rope</p> <p></p> <p>1 PC</p>	<p>(8) Wall Plug</p> <p></p> <p>2 PCS</p>	<p>(9) Screw (#8×1-1/4")</p> <p></p> <p>2 PCS</p>	<p>(10) Plastic Sheet</p> <p></p> <p>2 PCS</p>	<p>(11) Screw (#6×3×15)</p> <p></p> <p>2 PCS</p>

Preparation

Before beginning assembly of this mantel, make sure all parts are present. Compare parts with package contents list and diagram above. If any parts are missing or damaged, do not attempt to assemble, install, or operate this product. Contact Touchstone Home Products Customer Service at 800-215-1990 for replacement parts.

NOTE: Dispose of plastic bag, as it may cause choking hazard with young children. Do not let children play with plastic bag.

Assembly Instructions

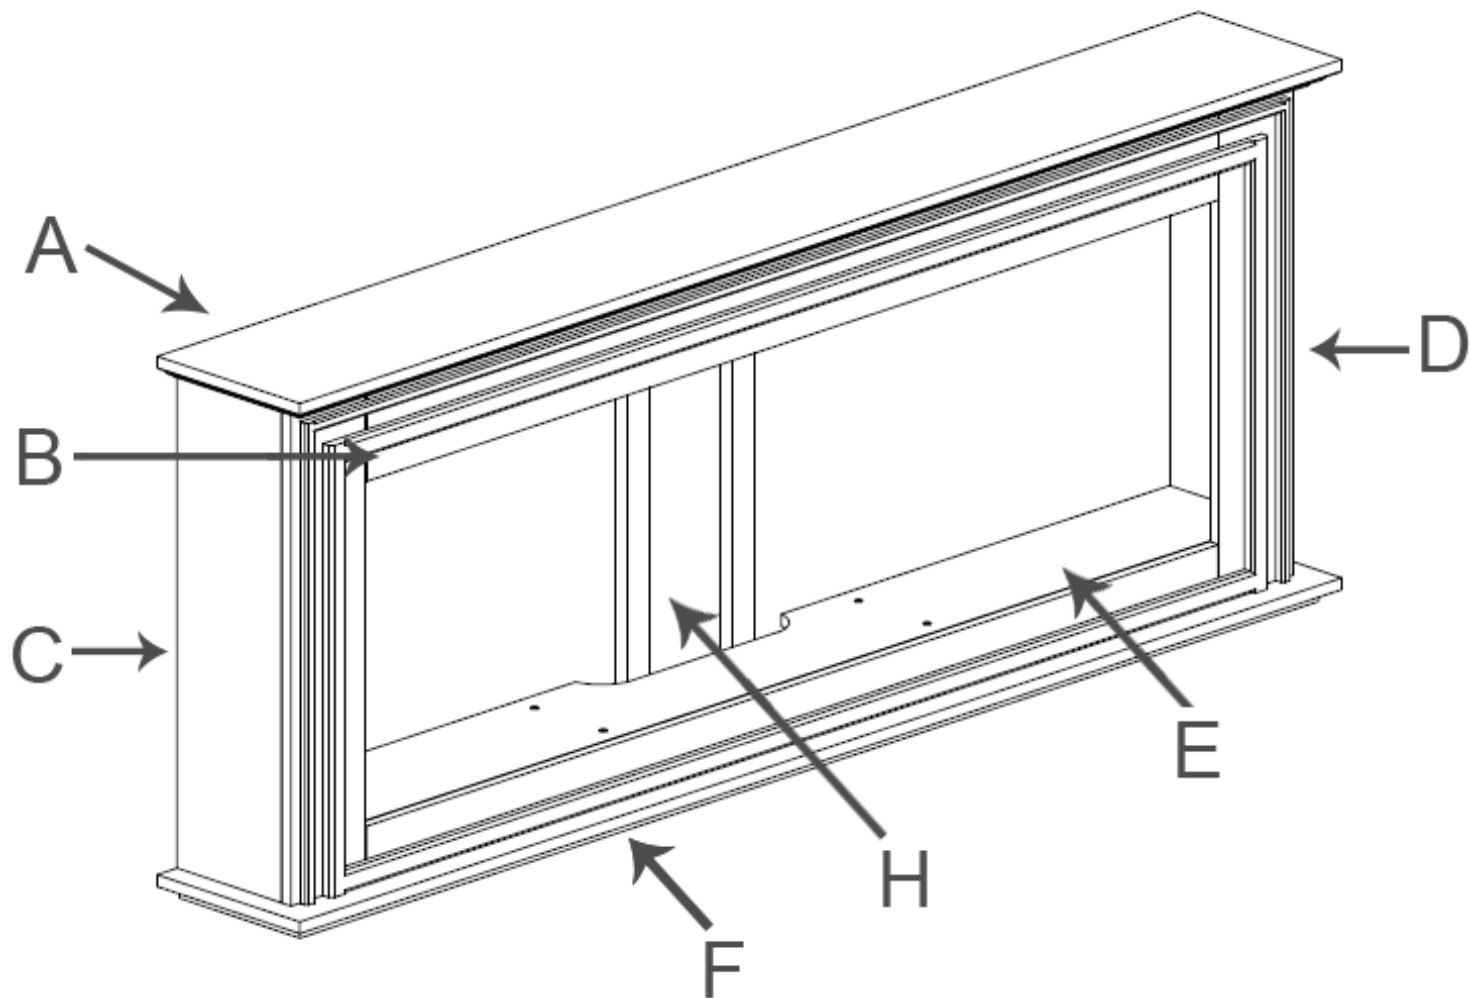







Exploded view of all cabinet pieces

A – Top Panel – 1	E – Shelf – 1
B – Front Frame – 1	F – Bottom Shelf – 1
C – Left Side Panel – 1	G – Shelf Support - 2 (not shown)
D – Right Side Panel – 1	H – Rear Support - 1 (90014 only)

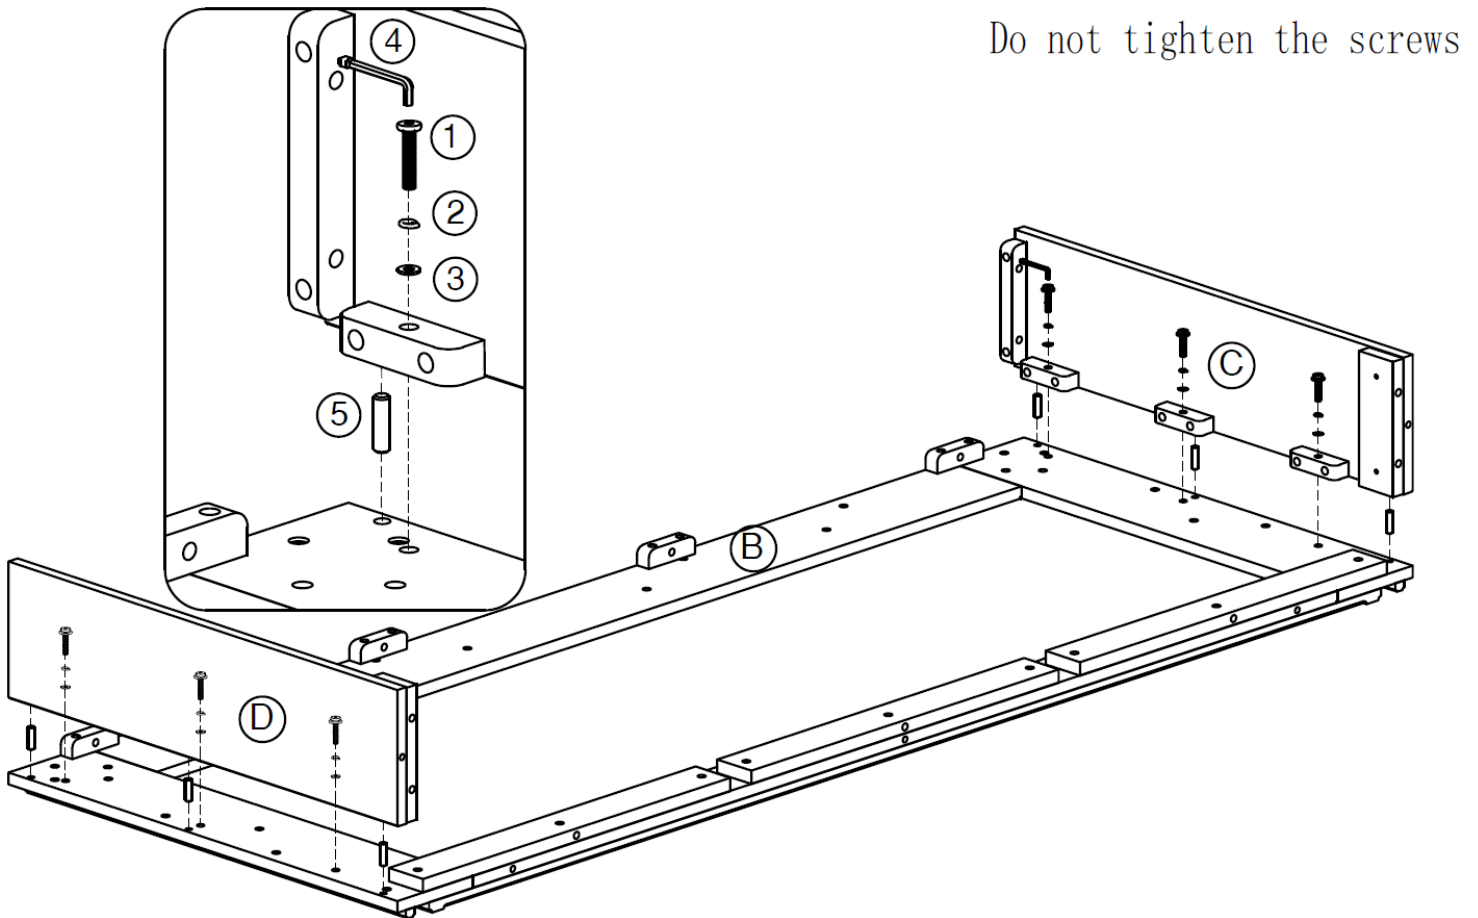Assembly Instructions – cont.


1. Insert wooden dowels (5) into the holes shown. Then using a bolt (1), spring washer (2) and flat washer (3), attach left side panel (C) and right side panel (D) to front frame (B) as shown below. 6 total of each bolt, spring washer, and flat washer sets will be used. Do not fully tighten the screws.








<p>① Bolt (Ø1/4"×1-1/4")</p>  <p>6 PCS</p>	<p>② Spring Washer (6mm)</p>  <p>6 PCS</p>	<p>③ Flat Washer (6×12mm)</p>  <p>6 PCS</p>	<p>④ Allen Key (4mm)</p>  <p>1 PC</p>	<p>⑤ Wooden Dowel (Ø8×30mm)</p>  <p>6 PCS</p>
---	---	--	--	--

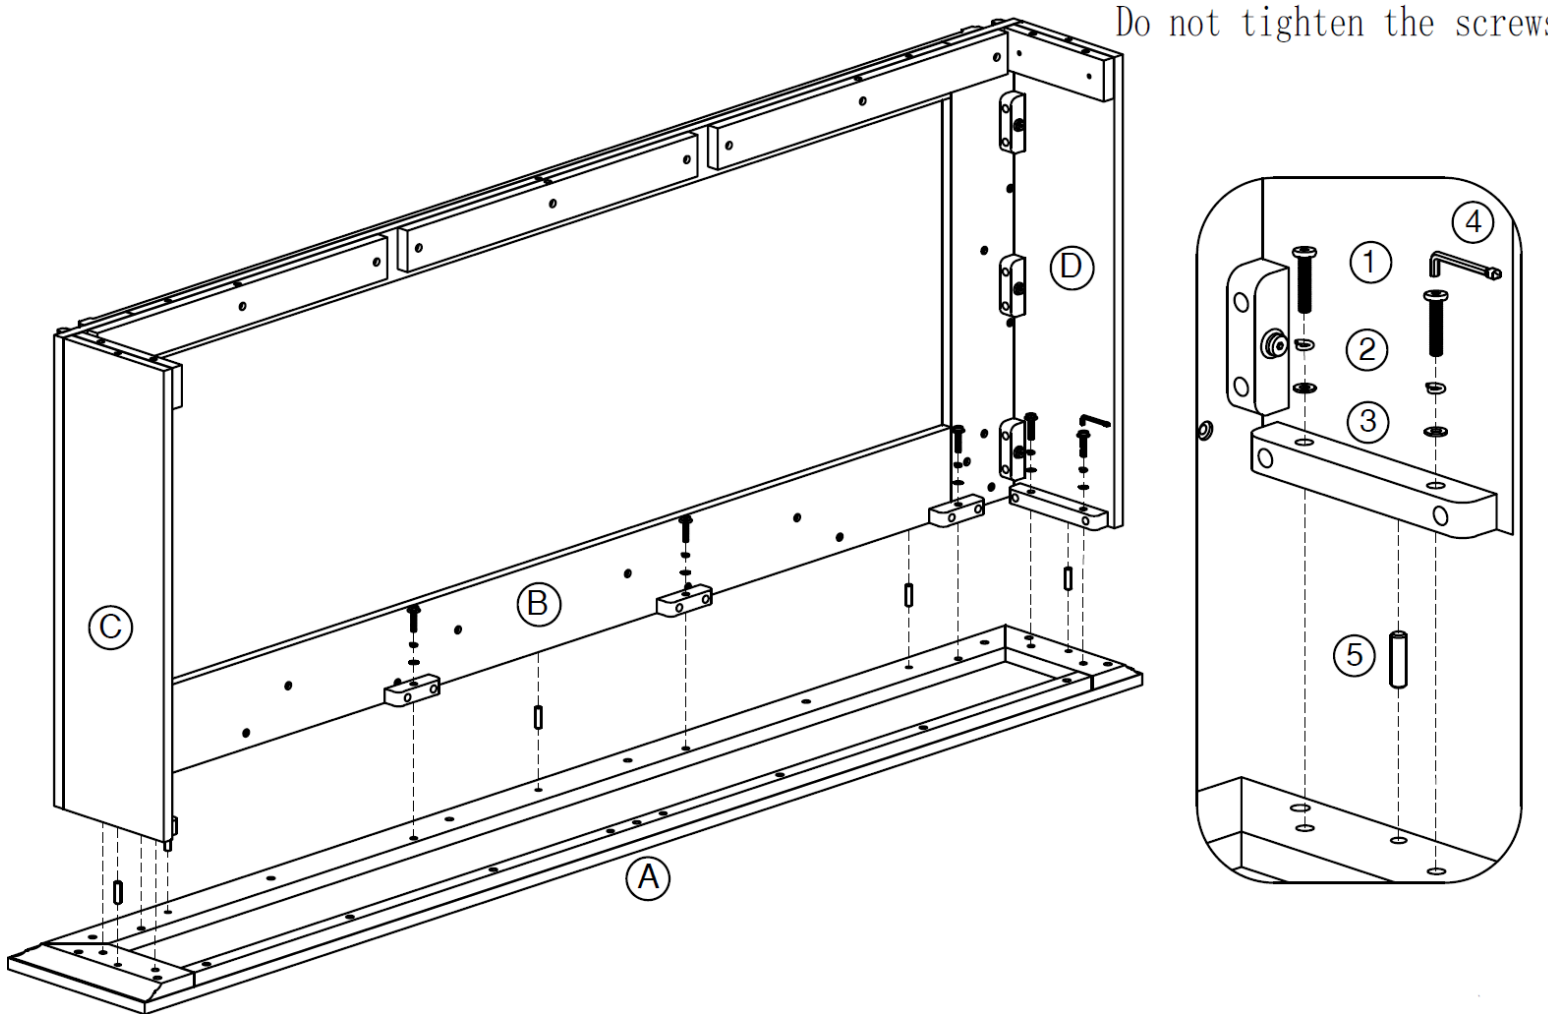Assembly Instructions – cont.

- Insert wooden dowels (5) into the holes shown on top panel (A). Then place front and side panels of mantel on top panel, lining up with the mounting holes in top panel (A). Using a bolt (1), spring washer (2) and flat washer (3), fasten front/side panels to top panel. 8 total of each bolt, spring washer, and flat washer sets will be used. Do not fully tighten the screws.









① Bolt (Ø1/4"×1-1/4")  8 PCS	② Spring Washer (6mm)  8 PCS	③ Flat Washer (6×12mm)  8 PCS	④ Allen Key (4mm)  1 PC	⑤ Wooden Dowel (Ø8×30mm)  5 PCS
---	---	--	--	--

Assembly Instructions – cont.

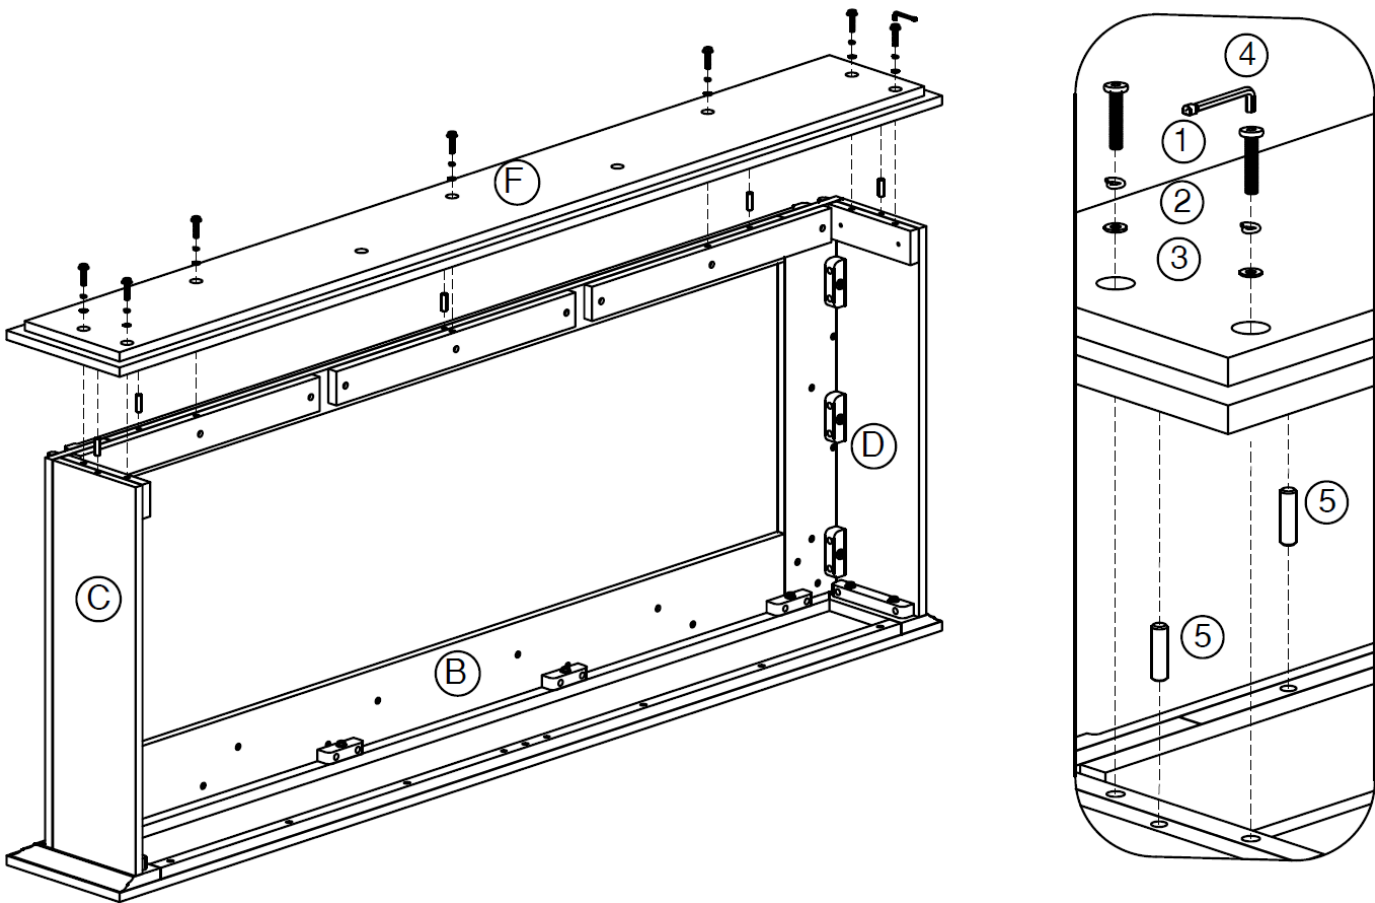3. Insert wooden dowels (5) into the holes shown in bottom of front frame (B) and side panels (C & D). Then place bottom shelf (F) on top of front and side panels, lining up with the mounting holes in the bottom shelf (F). Using a bolt (1), spring washer (2) and flat washer (3), fasten the bottom shelf to the front and side panels. 7 total of each bolt, spring washer, and flat washer sets will be used. Do not fully tighten the screws.

Do not tighten the screws









① Bolt (Ø1/4"×1-1/4")  7 PCS	② Spring Washer (6mm)  7 PCS	③ Flat Washer (6×12mm)  7 PCS	④ Allen Key (4mm)  1 PC	⑤ Wooden Dowel (Ø8×30mm)  5 PCS
---	---	--	--	--

Assembly Instructions – cont.

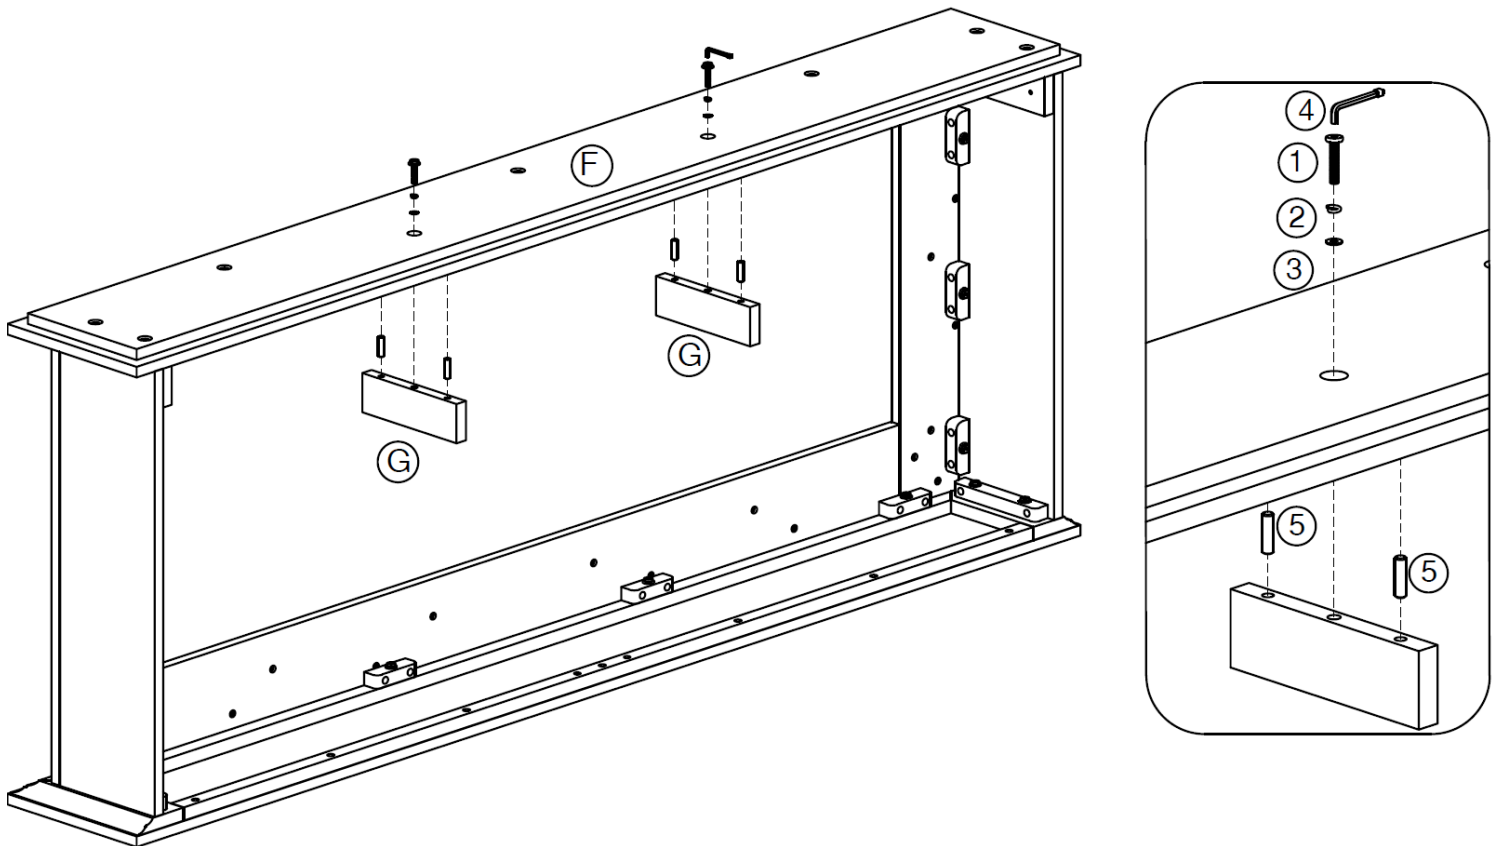4. Insert 2 wooden dowels (5) into the holes shown in bottom shelf support pieces (G). Then align the 2 shelf support pieces up with the holes in the bottom panel. Using a bolt (1), spring washer (2) and flat washer (3), fasten front/side panels to bottom shelf (F). 2 total of each bolt, spring washer, and flat washer sets will be used. Once complete, TIGHTEN ALL SCREWS shown in section 1, 2, 3 and 4 of the Assembly Instructions.




Tighten all screws



<p>① Bolt (Ø1/4"×1-1/4")</p>  <p>2 PCS</p>	<p>② Spring Washer (6mm)</p>  <p>2 PCS</p>	<p>③ Flat Washer (6×12mm)</p>  <p>2 PCS</p>	<p>④ Allen Key (4mm)</p>  <p>1 PC</p>	<p>⑤ Wooden Dowel (Ø8×30mm)</p>  <p>4 PCS</p>
---	---	--	--	--

Assembly Instructions – cont.

5. Flip over the Encase Mantel so that the bottom panel (F) is sitting on the floor. Place shelf (E) in the cabinet and fasten to the 2 shelf support pieces using the 6 screws provided (6).

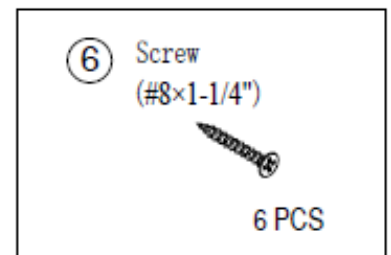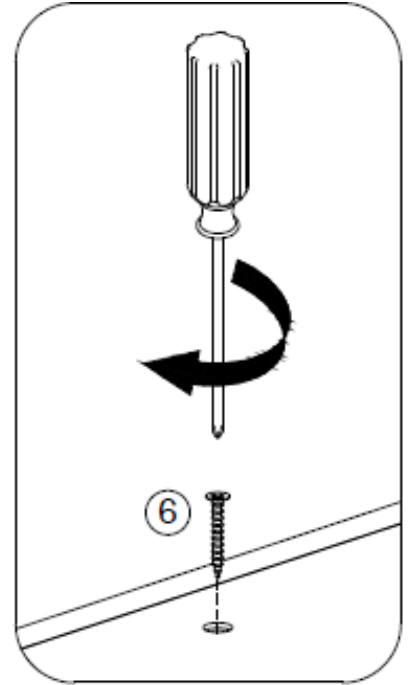
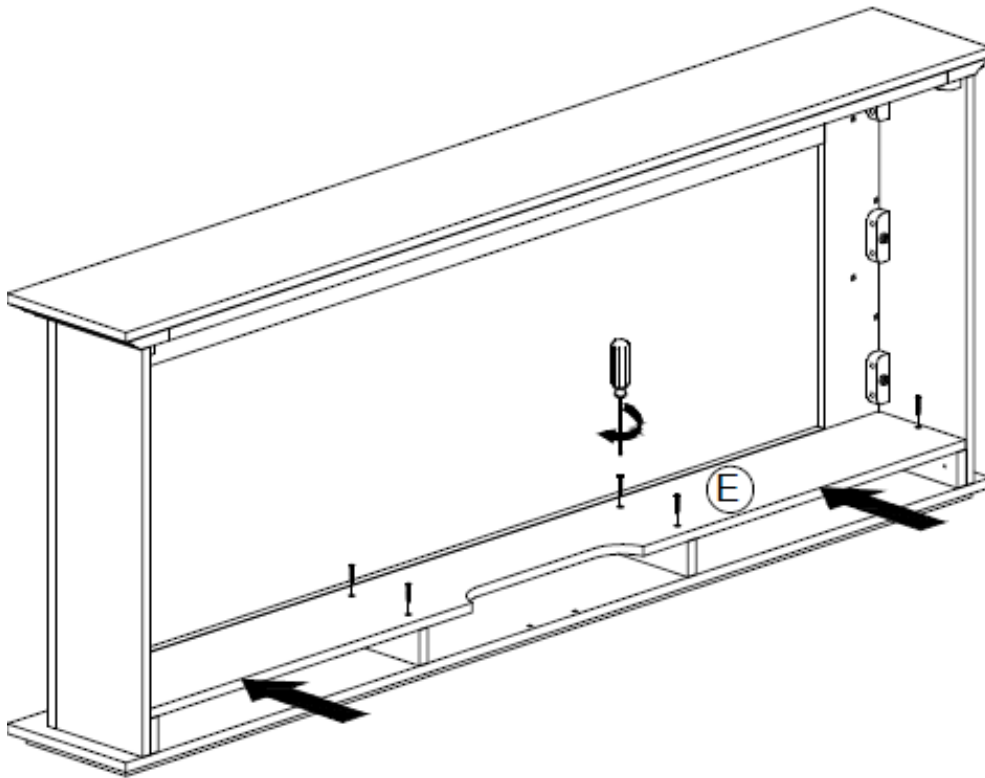






Assembly Instructions – cont.

6. For Encase Mantel part number 90014 ONLY:

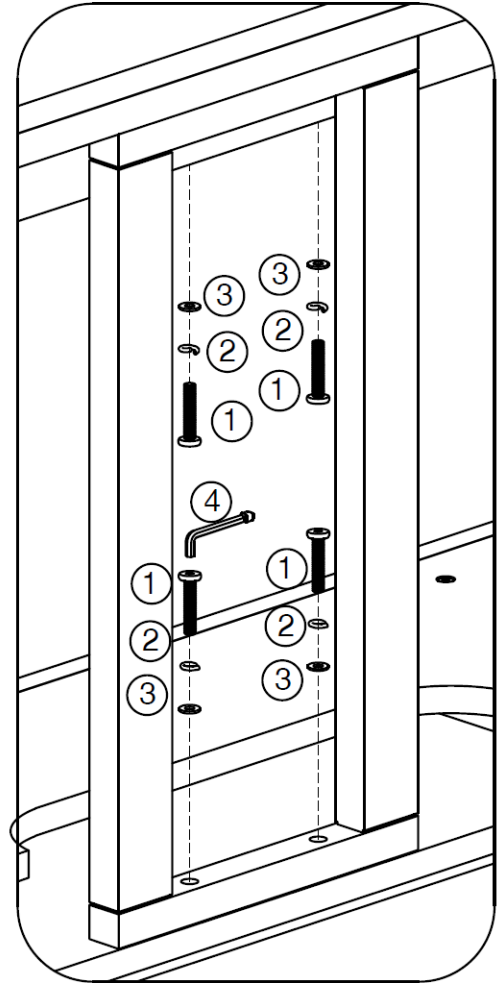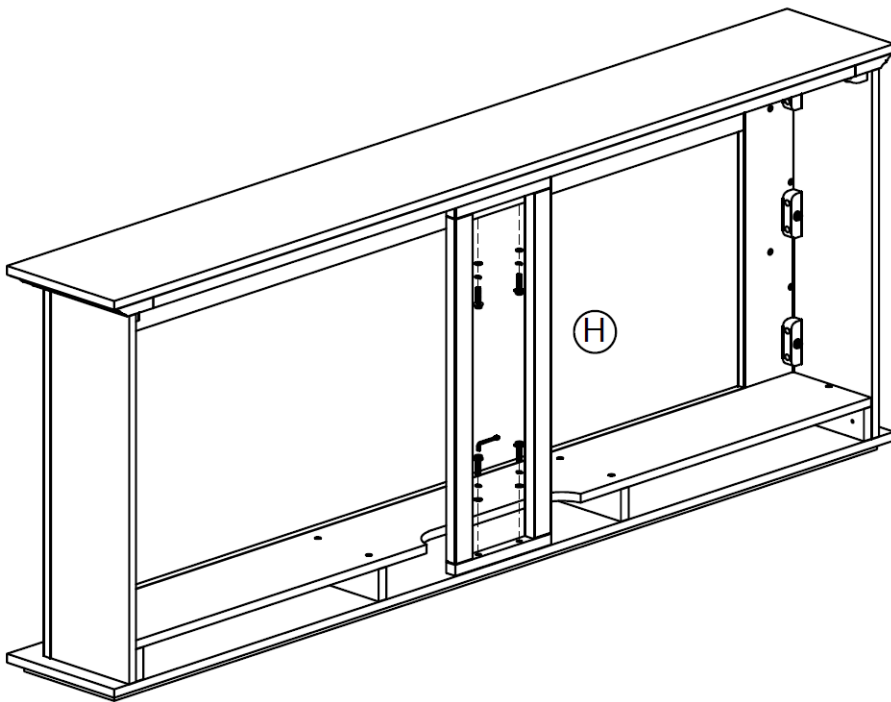Install rear panel (H) on back of mantel. Use 4 total of each bolt, spring washer, and flat washer sets will be used. TIGHTEN ALL SCREWS

Tighten all screws






 

<p>① Bolt ($\emptyset 1/4" \times 1-1/4"$)</p>  <p>4 PCS</p>	<p>② Spring Washer (6mm)</p>  <p>4 PCS</p>	<p>③ Flat Washer (6x12mm)</p>  <p>4 PCS</p>	<p>④ Allen Key (4mm)</p>  <p>1 PC</p>
--	---	--	--

Securing Mantel to Wall

WARNING – Please read before completing installation


- Serious or fatal crushing injuries can occur from furniture tip-over. Always secure this furniture to the wall using the tip-over restraints provided.
- DO NOT place TV or other HEAVY objects on top of this product.
- NEVER let children climb or hang on this product.
- DO NOT use this product outdoors.

Parts

7 Plastic Rope  1 PC	8 Wall Plug  2 PCS	9 Screw (#8×1-1/4")  2 PCS	10 Plastic Sheet  2 PCS	11 Screw (#6×3×15)  2 PCS
---	--	---	--	--


Instructions

1. Insert 2 wall plugs (8) into wall and attach plastic sheet (10) to wall using 2 screws (9).

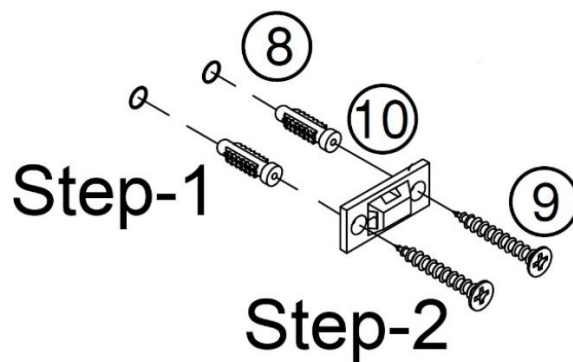


Securing Mantel to Wall – cont

2. Fasten plastic sheet (10) to underside of top panel using 2 screws (11).

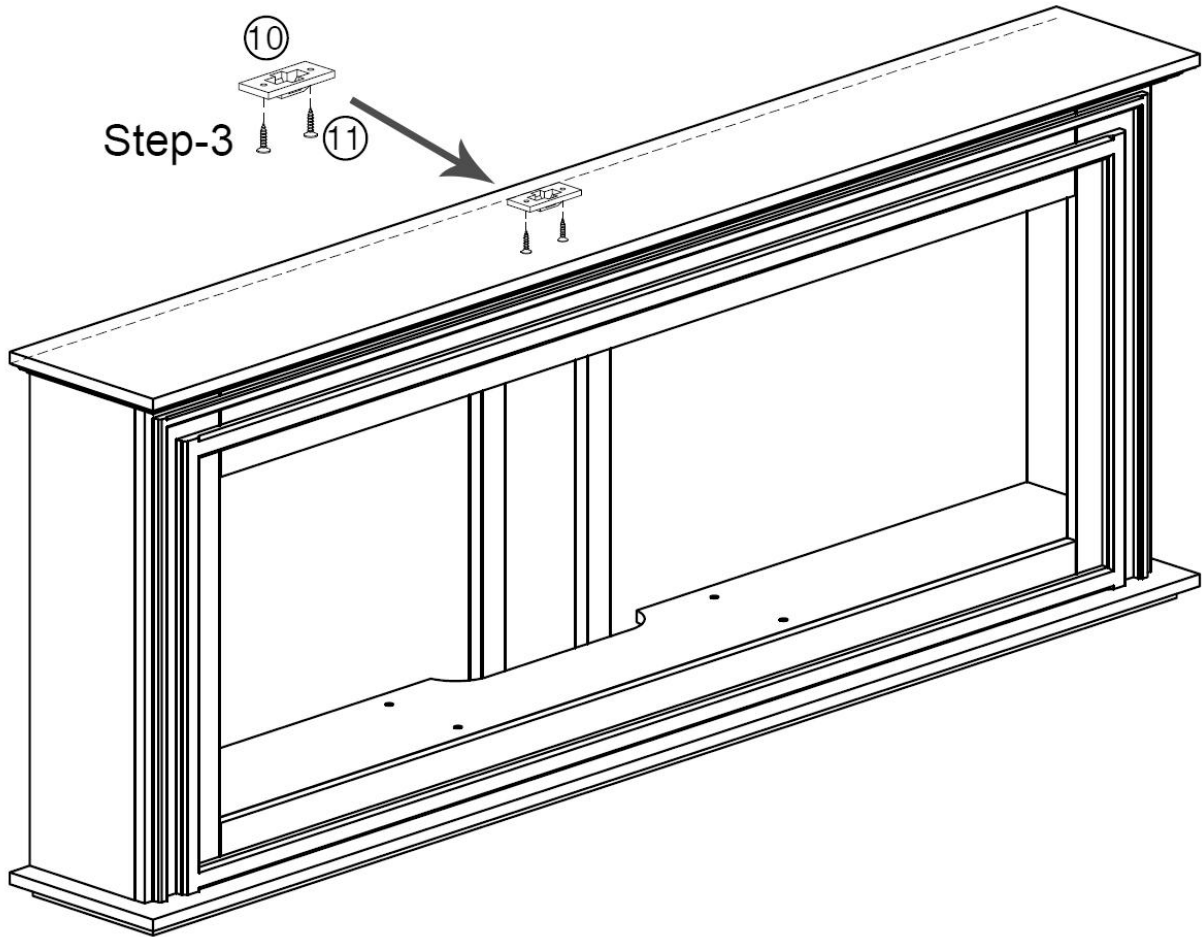

Securing Mantel to Wall – cont

3. Fasten plastic strap (7) through slots in plastic sheets (10) that are attached to the wall and the underside of the top of the mantel. This will secure the mantel to the wall so that it cannot be tipped over.

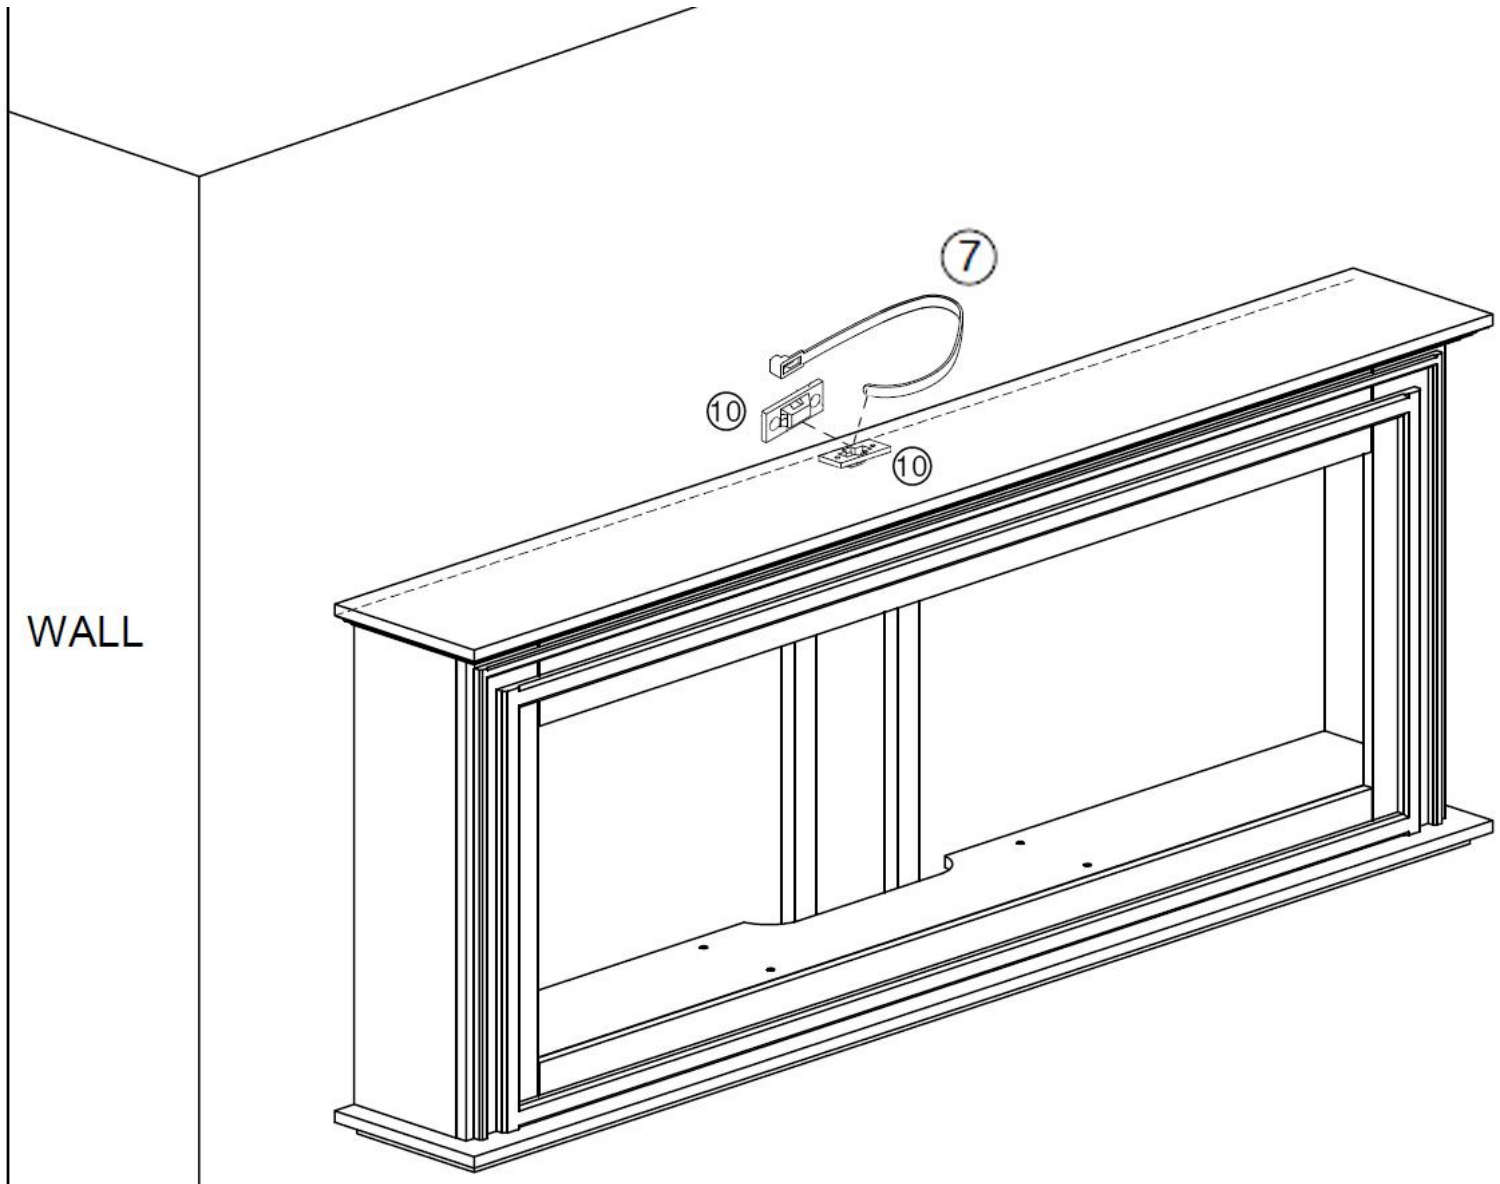

Installation of Fireplace In Encase Surround Mantel

The Touchstone Encase Surround Fireplace Mantels support mounting the following Touchstone Home Products Electric Fireplaces:

Surround Mantel SKU	Touchstone Fireplace Supported
90000	80052
90001	80036, 80057
90014	80037, 80058

Before installing the fireplace in the mantel, please remove the rubber feet off the bottom of the fireplace. For instructions on removing the rubber feet, please check your fireplace's installation manual.

For installing the fireplace in the mantel, please go to the Recessed Installation section of your fireplace's user manual and follow the instructions for recessing the fireplace into a wall. This is the same procedure for installing the fireplace in the Encase Surround Mantel.

Warranty

Touchstone Home Products Limited Warranty

Touchstone Home Products®, Inc offers a one (1) year limited warranty on all Encase Surround Fireplace Mantels (see your Touchstone Home Products Electric Fireplace user manual for warranty information on the electric fireplace). The one (1) year warranty starts on the date of purchase and expires 1 calendar year from the original date of purchase.

Touchstone does not warrant its products against damage caused by third parties.

The warranty does not cover paint scratches, cosmetic blemishes, or other normal wear and tear associated with the cabinet.

Touchstone Home Products® will not be responsible for installation, labor, or any other expenses related to the reinstallation of a warranted part, and such expenses are not covered under warranty.

Conditions and Limitations

Touchstone Home Products®, Inc warrants our Encase Surround Mantel to be free of defects in material and workmanship to the original purchaser only. Registering your warranty is not necessary. Just provide your proof of purchase along with the model fireplace to make a warranty claim.

Warranty coverage begins on the date of purchase.

The factory warranty is non-transferrable.

 
Touchstone Home Products®, Inc does not cover damages caused by abuse, accident, alterations, lack of maintenance, misuse, or neglect. Parts installed from other manufacturers will void the warranty.

Touchstone Home Products®, Inc does not warrant its products against damage caused by third parties.

The warranty does not cover paint scratches, cosmetic blemishes, dents, corrosion, or other normal wear and tear. The Encase Surround Mantel is not for outdoor use. Damage to Encase Surround Mantel due to water, weather damage, long periods of dampness, condensation, damaging chemicals or cleaners are not covered under warranty.

Touchstone Home Products limited warranty does not cover accidental breakage.







For immediate help with assembly, product information,
or if your product arrives damaged, call our toll-free number at

800-215-1990

or email:

customerservice@thpus.com

Our staff is ready to provide assistance.

Affix Serial Number Label Here