


ENCASE SURROUND FIREPLACE MANTEL

Model # : 90017

ASSEMBLY INSTRUCTIONS

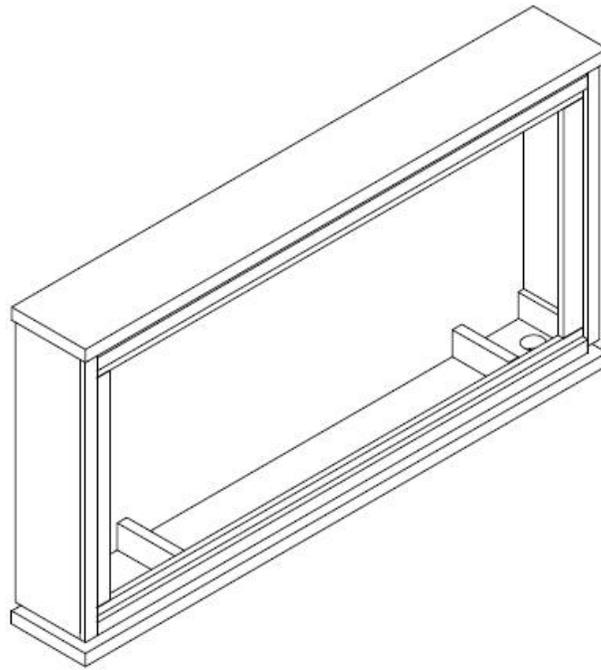

90017 – Encase 50'' Sideline Mantel - White

CAUTION	Read and understand this entire owner's manual, including all safety information , <u>before</u> assembling or using this product. Failure to do so could result in serious personal injury .
WARNING	Keep this owner's manual for future reference. If you sell or give this product away, make sure this manual accompanies this product .



**PREMIUM
ELECTRIC FIREPLACES
& TV LIFTS**

Exceeding Expectations



Table of Contents

Contents


Dimensional Drawings	5
<i>90017 - Encase Sideline 50" Mantel</i>	5
Unpacking Your Mantel.....	6
Assembly Instructions	7
Securing Mantel to Wall	14
Mounting Mantel to Wall.....	17
Installation of Fireplace In Encase Surround Mantel	20
Warranty.....	21

IMPORTANT SAFETY INFORMATION WARNING!

- Before assembly, carefully use scissors or utility knife to cut and unwrap all parts. **DO NOT DISCARD ANY HARDWARE!**
- Use care assembling your new mantel. Take your time and use the hardware provided. Never overtighten bolts.
- All panels are labeled left and right as viewed from the front of the unit.
- Serious or fatal crushing injuries can occur from furniture tip-over. Always secure this furniture to the wall using the tip-over restraints provided.
- **DO NOT** place TV or other **HEAVY** objects on top of this product.
- **NEVER** let children climb or hang on this product.
- **DO NOT** use this product outdoors.
- Please **READ** and **UNDERSTAND** the manual for the electric fireplace that is used in conjunction with this mantel. **FOLLOW INSTRUCTIONS** for the electric fireplace as outlined in the electric fireplace manual.
- Front of fireplace and mantel should not be blocked when in use.

Dimensional Drawings

90017 - Encase Sideline 50" Mantel

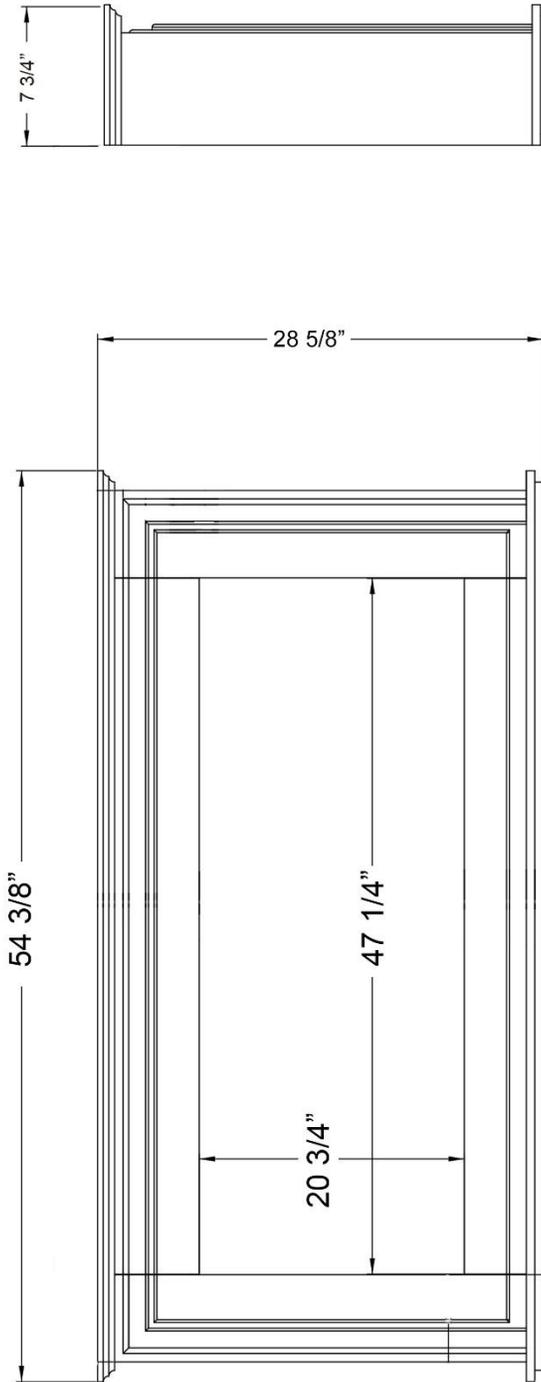

Encase 50" Sideline® Mantel
PN: 90018



PREMIUM
ELECTRIC FIREPLACES
& TV LIFTS

Exceeding Expectations
Rev: 12/30/2025

90017 - Encase 50" Sideline® Mantel:

- Color: White Semi-Gloss
- Fireplace Compatibility: 80004 Sideline® 50"
- Dimensions:
 - Width: 54 3/8"
 - Height: 28 5/8"
 - Depth: 7 3/4"








Unpacking Your Mantel

Parts and Hardware

Tools Required

- Phillips screwdriver
- Scissors or utility knife

What's in the Box

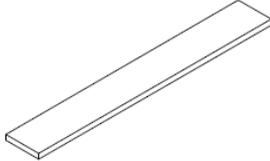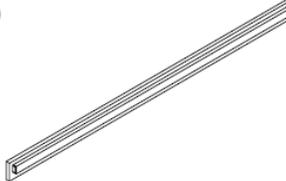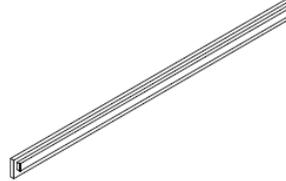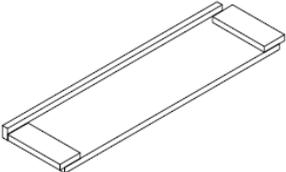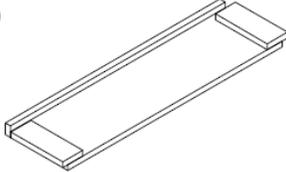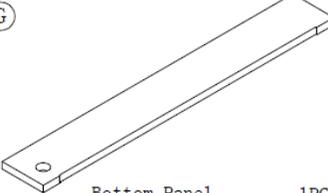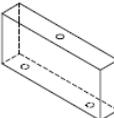 <p>Top Panel 1PC</p>	 <p>Front Panel-Top 1PC</p>	 <p>Front Panel-Bottom 1PC</p>	 <p>Front Panel Sides 2PCS</p>
 <p>Side Panel-Right 1PC</p>	 <p>Side Panel-Left 1PC</p>	 <p>Bottom Panel 1PC</p>	 <p>Fireplace Supports 2PCS</p>


 <p>1 $\phi 15 \times 13\text{mm}$ 16PCS</p>	 <p>2 $\phi 6 \times 10\text{mm}$ 16PCS</p>	 <p>3 M6 $\times 5/8"$ Bolt 6PCS</p>	 <p>4 M6 $\times 2-7/8"$ Bolt 6PCS</p>	 <p>5 4mm Allen Key 1PC</p>	 <p>6 $\phi 16\text{mm} \times 1/4"$ Flat Washer 6PCS</p>
 <p>7 $\phi 11\text{mm} \times 1/4"$ Spring Washer 6PCS</p>	 <p>8 #8 $\times 5/8"$ Screw 4PCS</p>	 <p>9 #8 $\times 1-1/2"$ (Flat Head Screw) 11PCS</p>	 <p>10 #8 $\times 1-1/2"$ (Round Head Screw) 8PCS</p>	 <p>11 $\phi 8 \times 30\text{mm}$ Wooden Dowel 20PCS</p>	 <p>12 wall plug 19PCS</p>
 <p>13 667 $\times 70 \times 20\text{mm}$ 1PC</p>	 <p>14 90 $\times 40 \times 35\text{mm}$ 2PCS</p>	 <p>15 1160 $\times 80 \times 60\text{mm}$ 1PC</p>			
 <p>16 Plastic Rope 1PC</p>	 <p>17 wall plug 2PCS</p>	 <p>18 #8 $\times 1-1/4"$ Screw 2PCS</p>	 <p>19 #8 $\times 5/8"$ Screw 2PCS</p>	 <p>20 Plastic Sheet 2PCS</p>	

Preparation

Before beginning assembly of this mantel, make sure all parts are present. Compare parts with package contents list and diagram above. If any parts are missing or damaged, do not attempt to assemble, install, or operate this product. Contact Touchstone Home Products Customer Service at 800-215-1990 for replacement parts.

NOTE: Dispose of plastic bag, as it may cause choking hazard with young children. Do not let children play with plastic bag.

Assembly Instructions

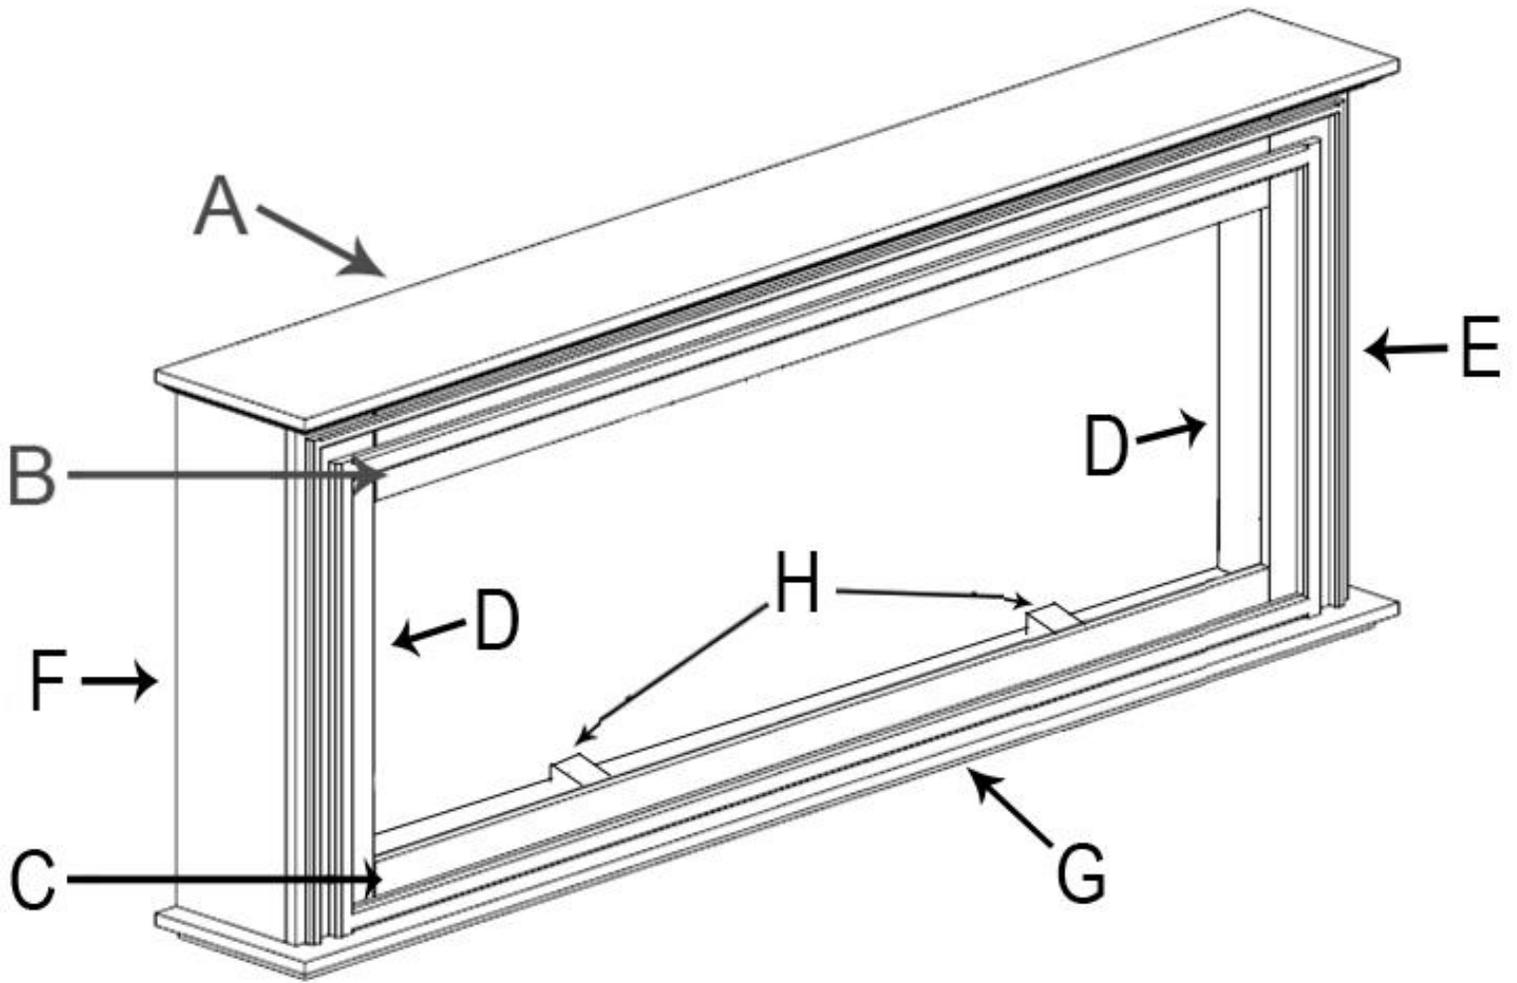



Exploded view of all cabinet pieces

A – Top Panel – 1pc	E – Side Panel - Right – 1pc
B – Front Trim - Top – 1pc	F – Side Panel – Left – 1pc
C – Front Trim – Bottom – 1pc	G – Bottom Panel – 1pc
D – Front Trim – Side – 2 pcs	H – Fireplace Supports – 2pcs

Assembly Instructions – cont.

1. Insert the wooded dowels (11) and cam screws (2) into Front Trim – Top (B) and Front Trim – Bottom (C). Insert cam locks (1) into both Front Trim – Side pieces (D).

Fasten Front Trim – Side pieces (D) to Front Trim – Top (B) and Front Trim – Bottom (C) using hardware pieces 1, 2 and 11. Tighten the cam locks (1) around the cam screw (2) but be sure not to overtighten the cam locks, as it could damage the frame.

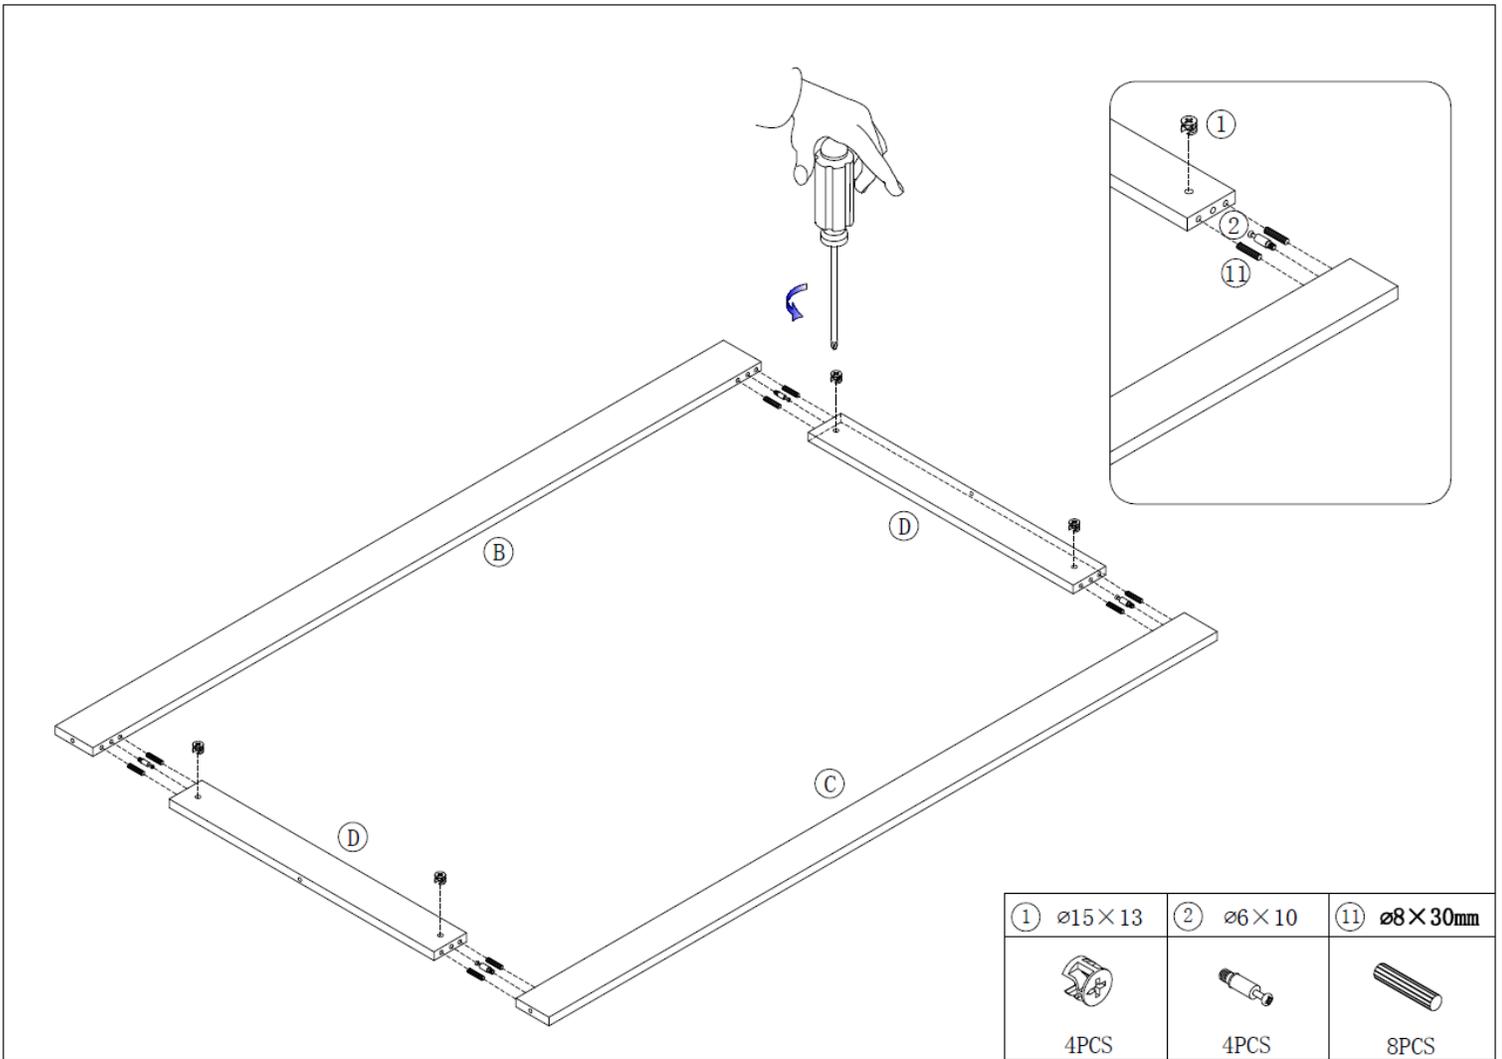
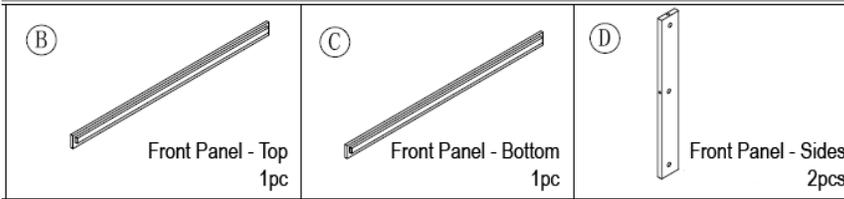


Assembly Instructions – cont.

2. Insert cam screws (2) into Side Panel – Left (F) and Side Panel – Right (E).

Insert cam locks (1) into the Front Trim section that was built in step 1.

Tighten cam locks so that pieces are secure. Do not overtighten cam locks.

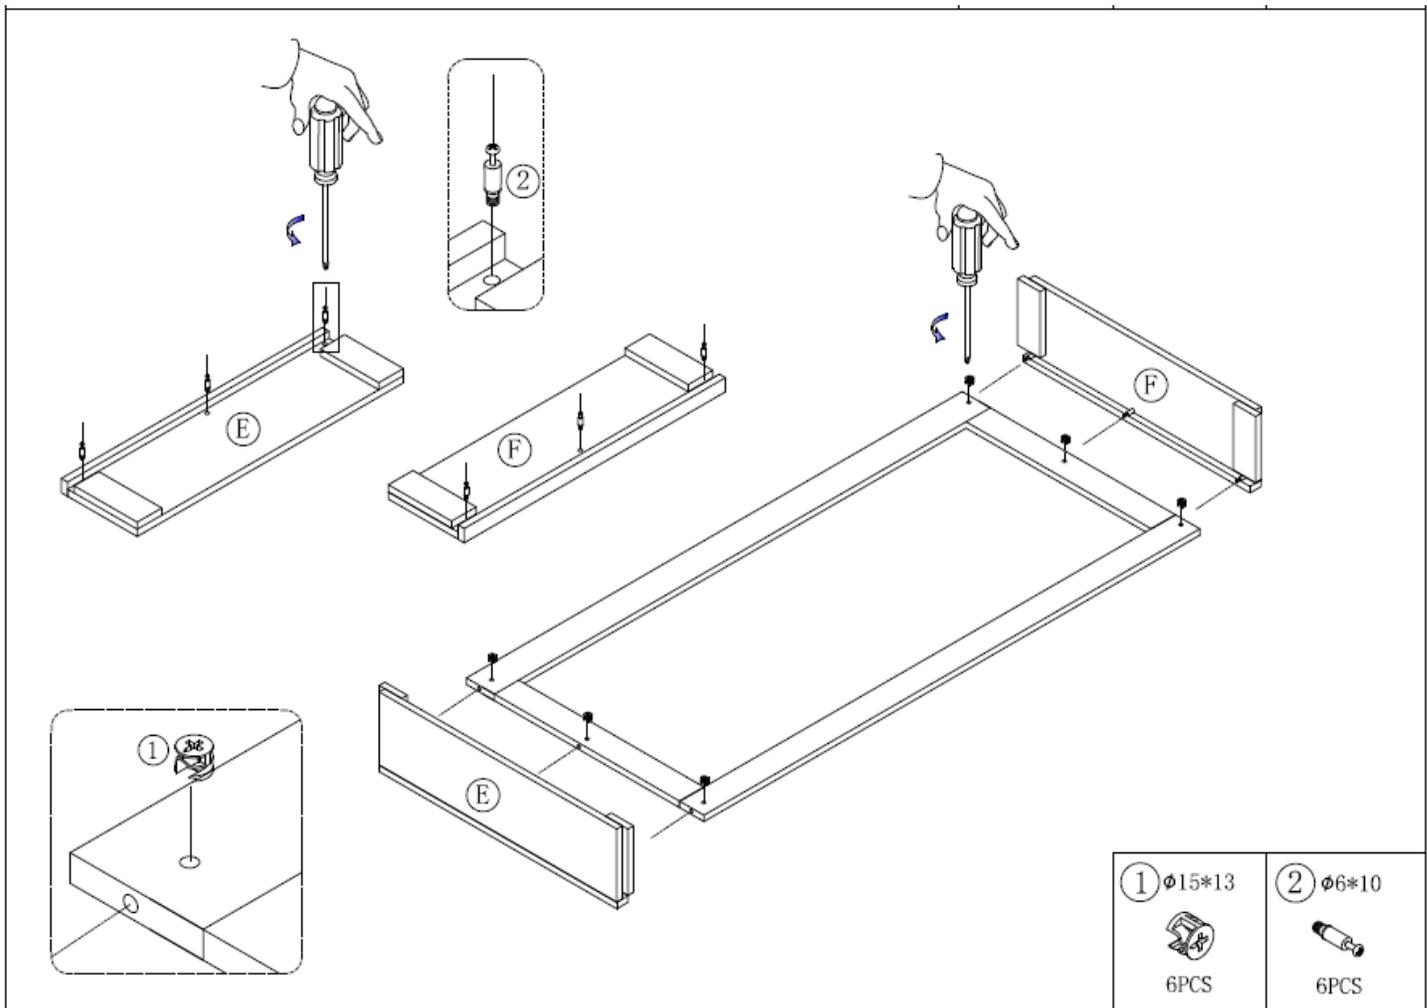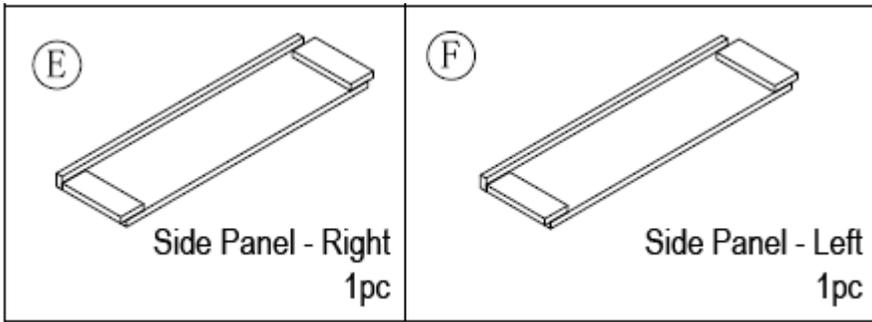



Assembly Instructions – cont.

- Lay Top Panel (A) upside down on the ground and install cam screws (2) into the Top Panel (A) as shown below. Place wooden dowels (11) where shown below.

Insert cam locks (1) into Front Trim – Top (B) and place front/side section of mantel upside down onto Top Panel (A) as shown below.

Tighten cam locks so that front/side section of mantel is secure to Top Panel (A). Do not overtighten cam locks.

Use hex screw (4) to fasten Side Panels (E and F) to Top Panel (A) as shown below.

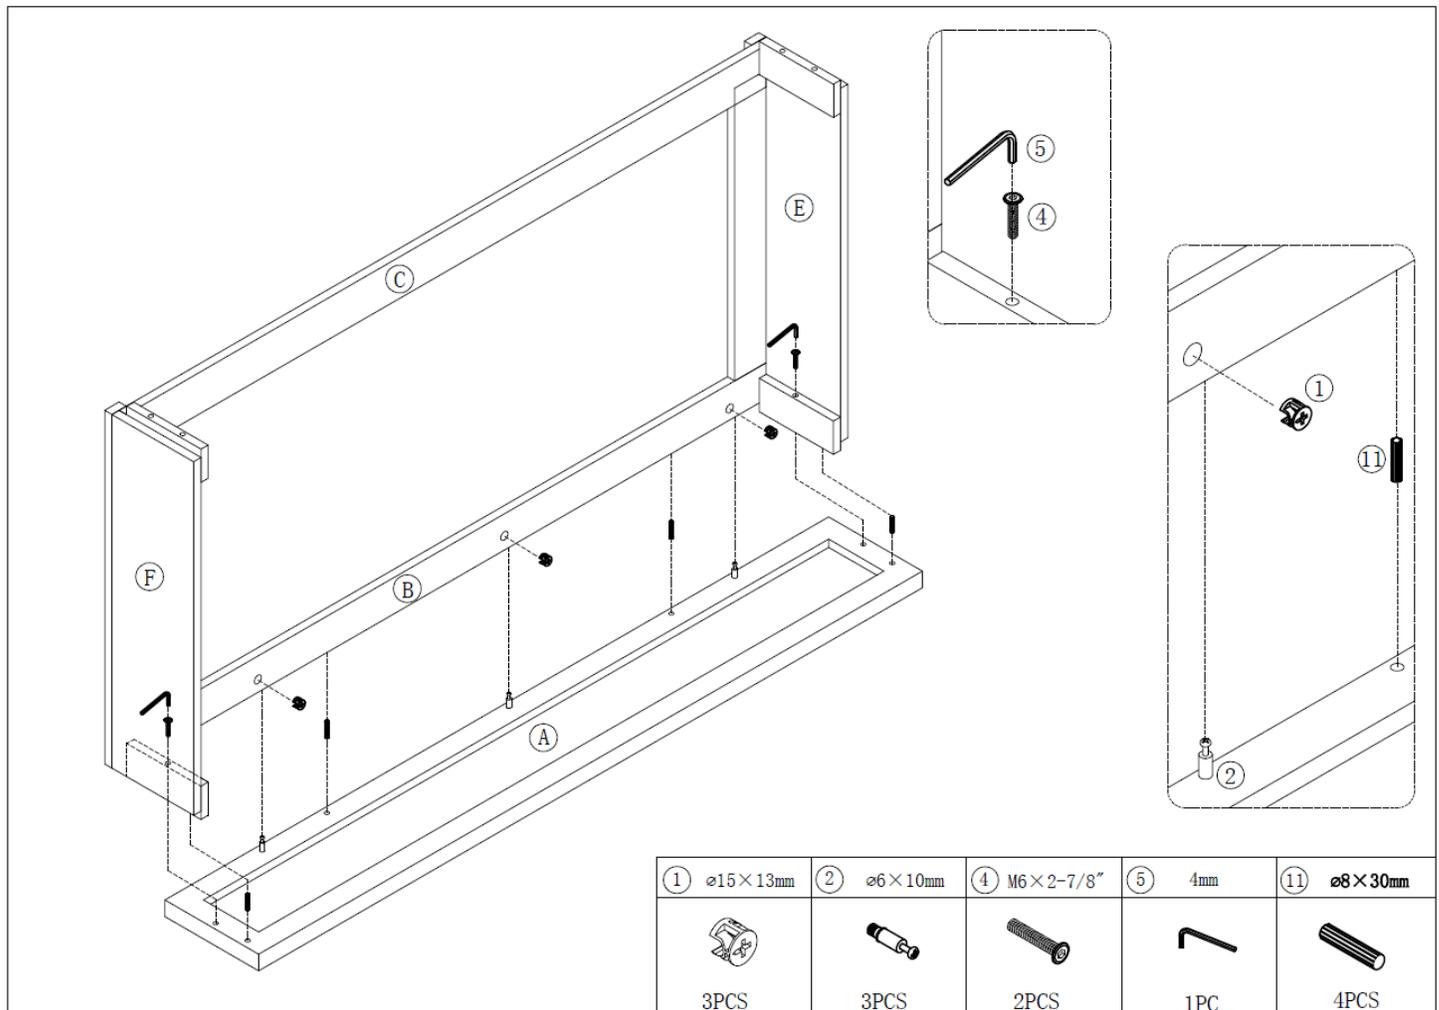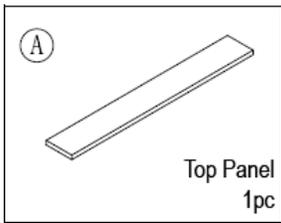



Assembly Instructions – cont.

4. Insert cam screws (2) into Bottom Panel (G) as shown below.

Insert cam locks (1) and wooden dowels (11) into Front Trim – Bottom (C) as shown below.



Lay Bottom Panel (G) onto mantel and lock cam locks. Do not overtighten cam locks.

Use hex bolt (4) to secure mantel to Bottom Panel (G).

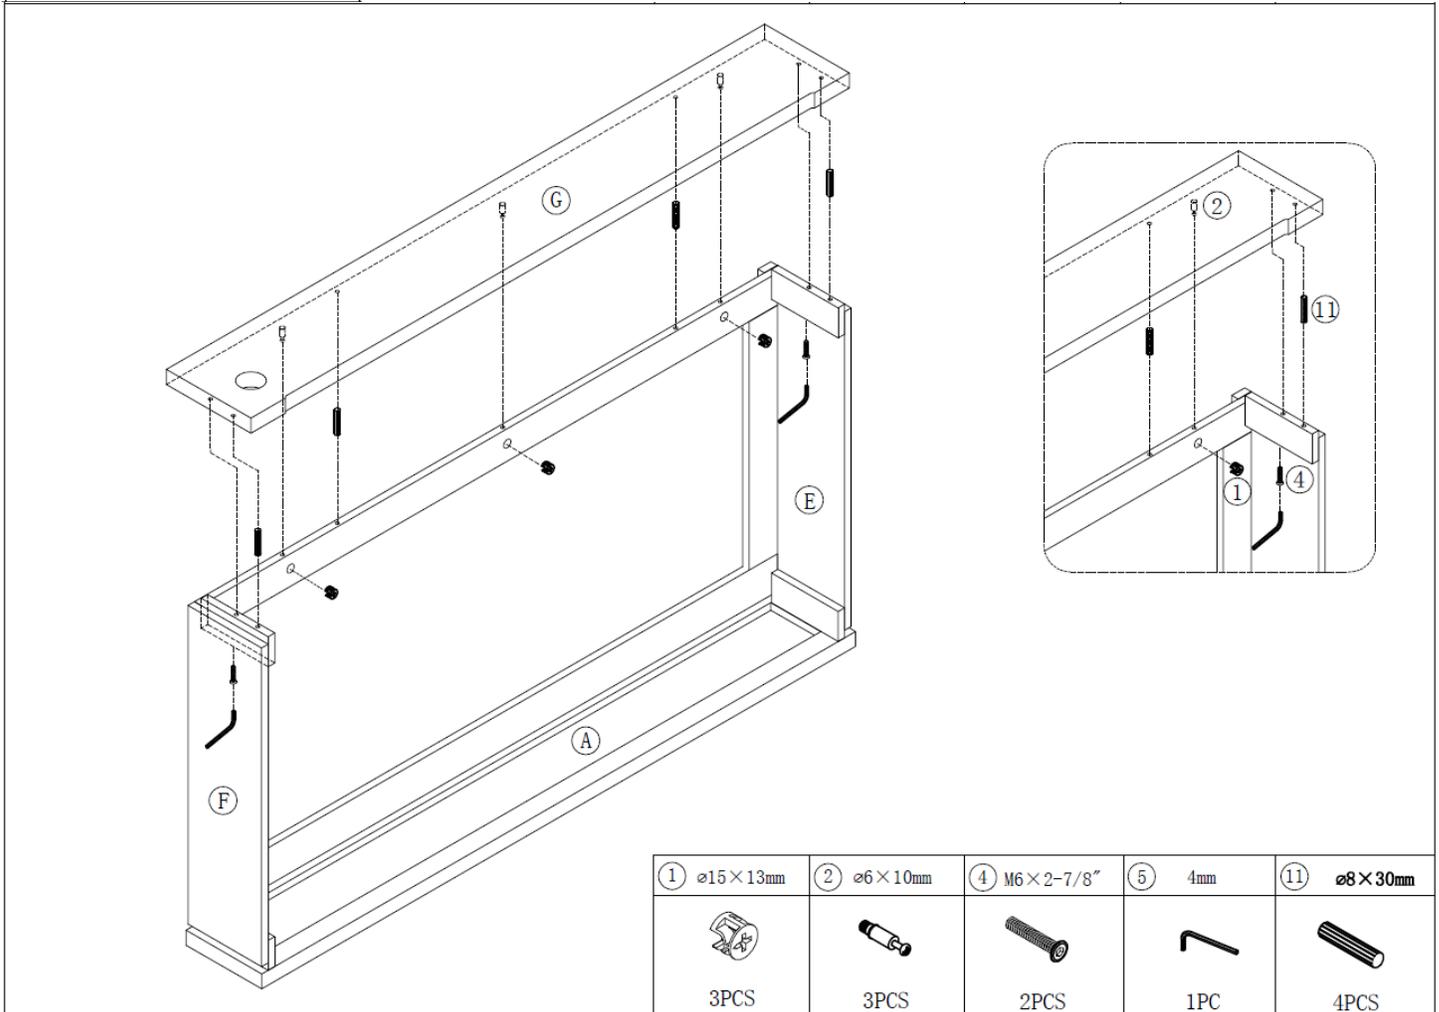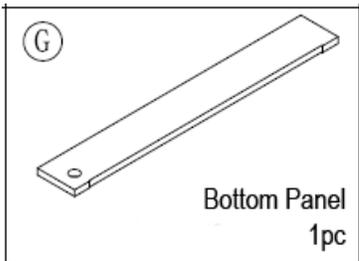


Assembly Instructions – cont.

- Place wooden dowels (11) in holes in Bottom Panel (G) shown below.
- Use hex screw (4) to fasten Fireplace Supports (H) to Bottom Panel (G). Do not overtighten hex screws.

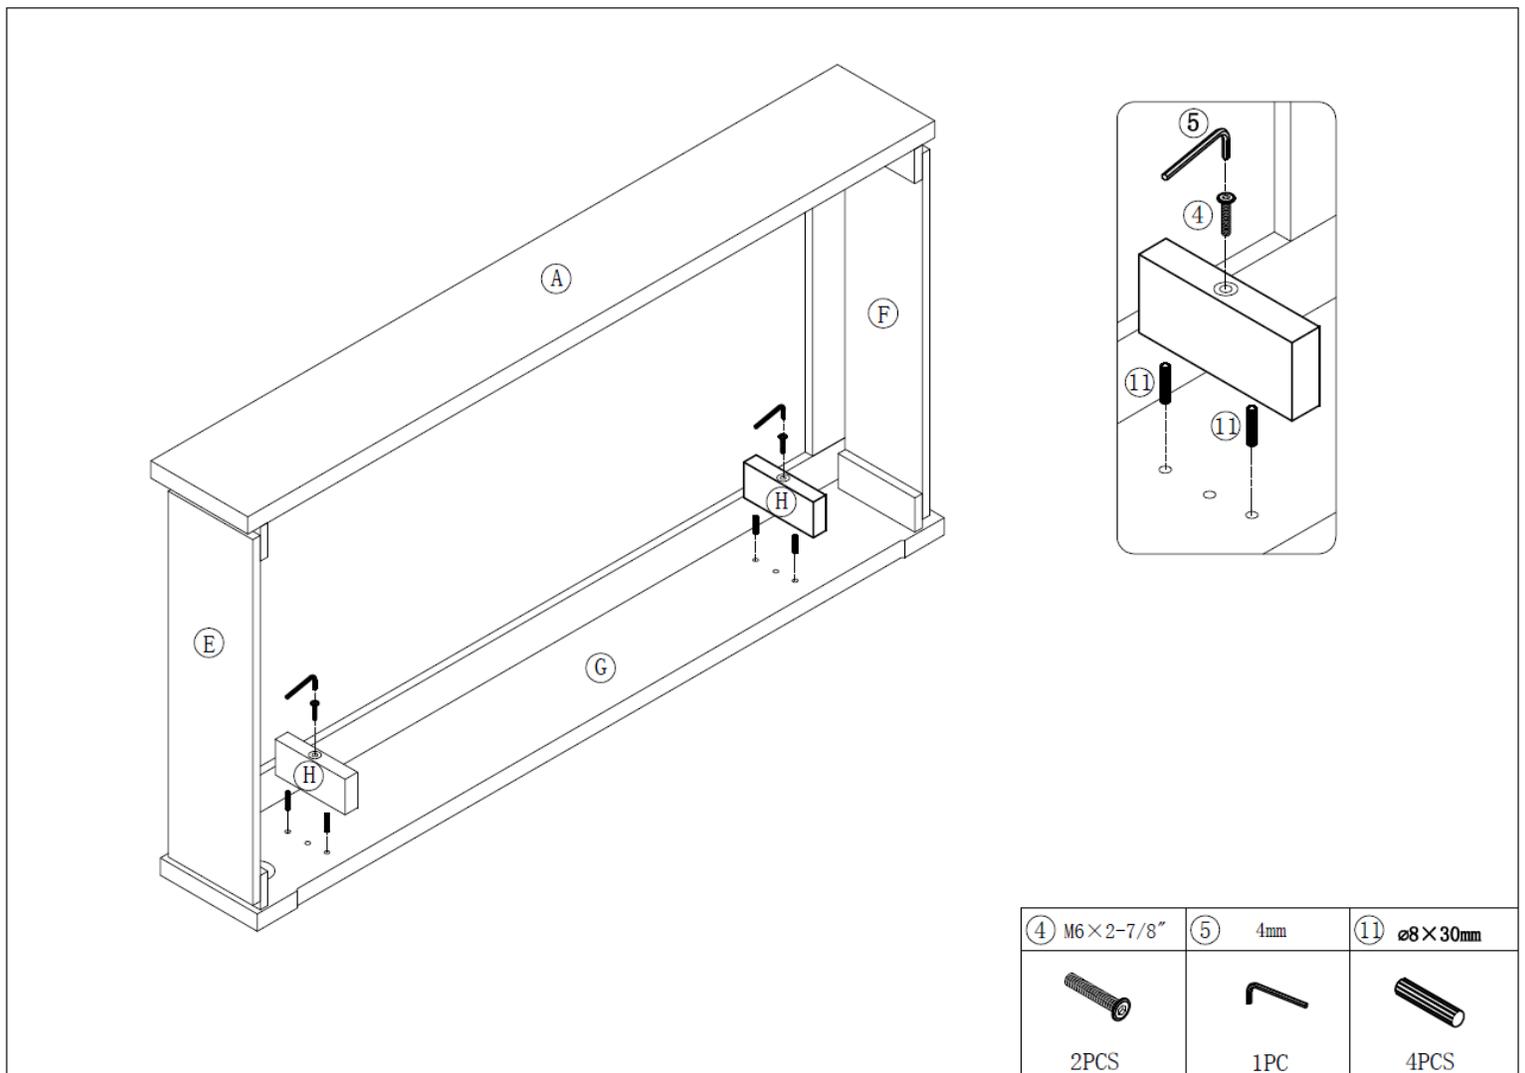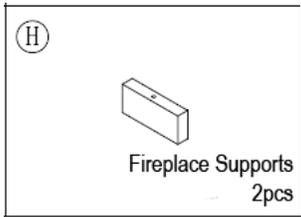

Assembly Instructions – cont.

- Fasten support bar (13) to Top Panel (A) and Bottom Panel (G) using hex screw (3), washer (6) and lock washer (7).

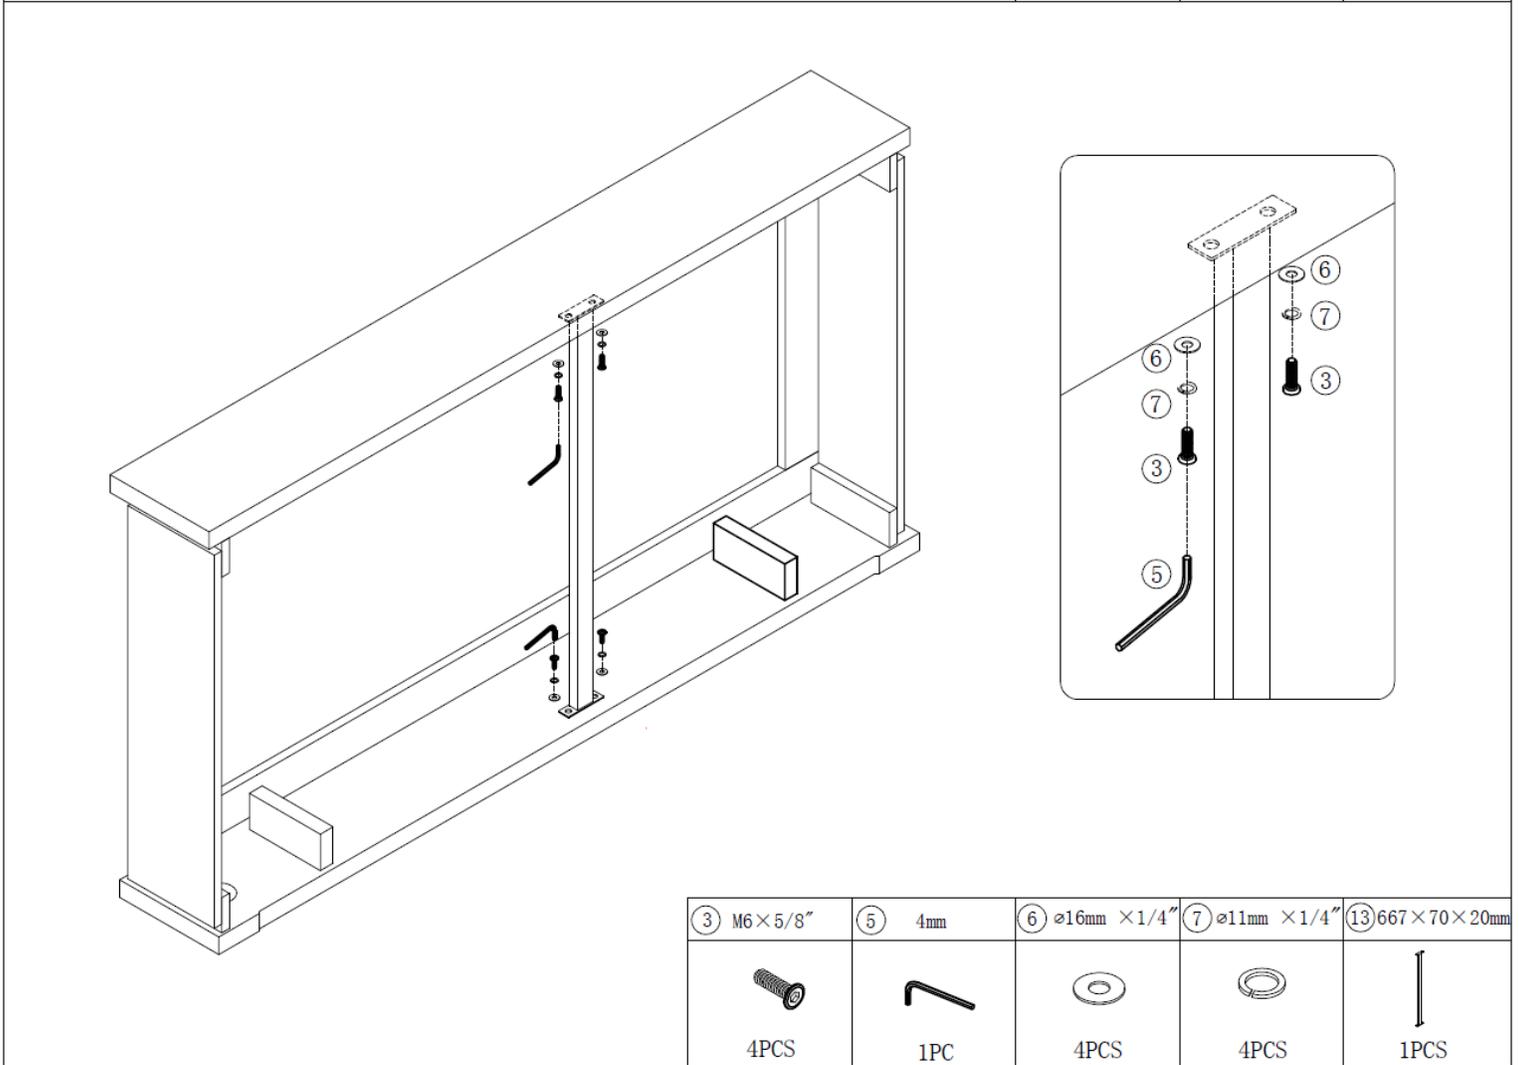

Securing Mantel to Wall

WARNING – Please read before completing installation

- Serious or fatal crushing injuries can occur from furniture tip-over. Always secure this furniture to the wall using the tip-over restraints provided.
- DO NOT place TV or other HEAVY objects on top of this product.
- NEVER let children climb or hang on this product.
- DO NOT use this product outdoors.


Parts

①⑥ Plastic Rope	①⑦ wall plug	①⑧ #8×1-1/4"	①⑨ #8×5/8"	②⑦ Plastic Sheet
				
1PC	2PCS	2PCS	2PCS	2PCS

Instructions

NOTE: Be sure that fireplace is not installed in mantel before proceeding with securing mantel to the wall.


1. Insert 2 wall plugs (17) into wall and attach plastic sheet (20) to wall using 2 screws (18).

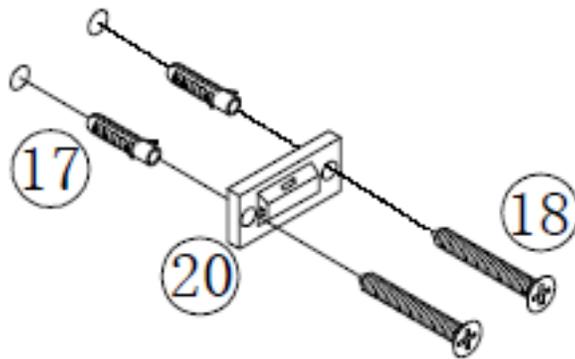

RECOMMENDATION	For increased stability, it is recommended to mount piece 20 to a wall stud.
-----------------------	--


Securing Mantel to Wall – cont

2. Fasten plastic sheet (20) to underside of top panel using 2 screws (19).

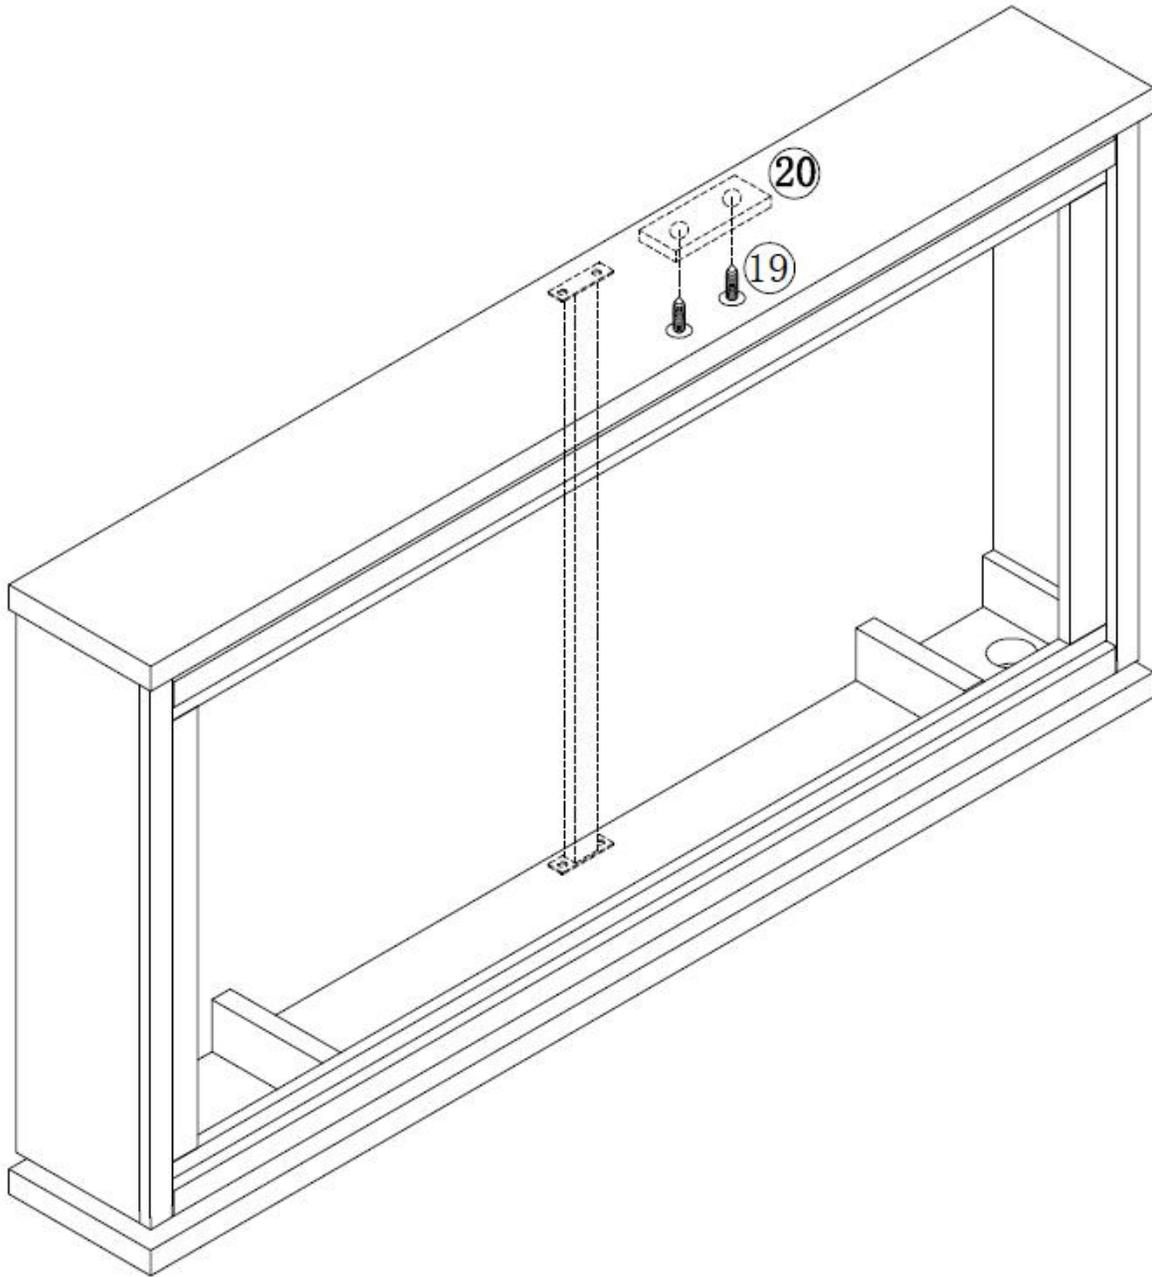

Securing Mantel to Wall – cont

3. Fasten plastic strap (16) through slots in plastic sheets (20) that are attached to the wall and the underside of the top of the mantel. This will secure the mantel to the wall so that it cannot be tipped over.

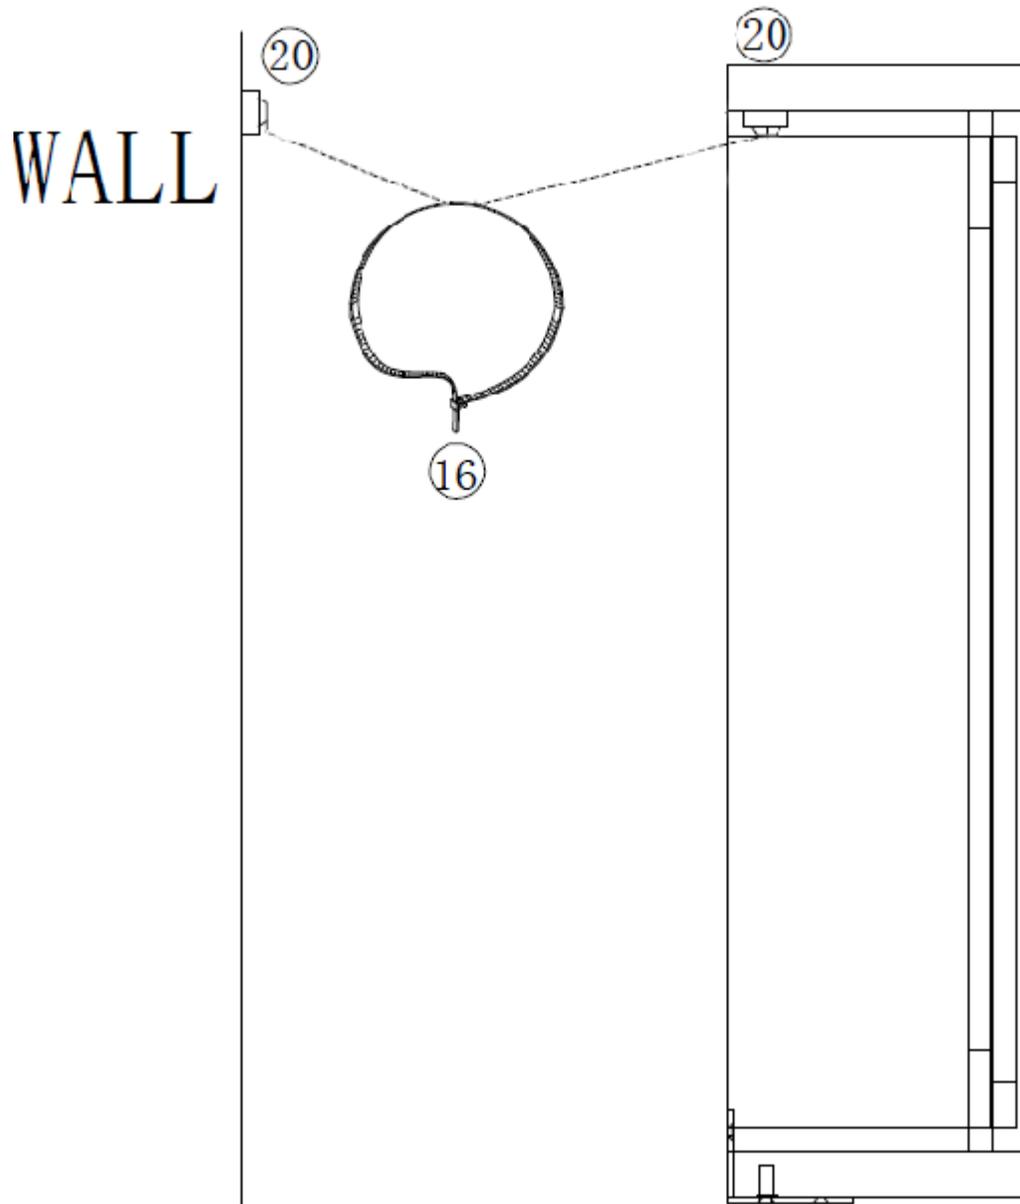

Mounting Mantel to Wall

WARNING – Please read before completing installation


- Serious or fatal crushing injuries can occur if mantel is mounted incorrectly to the wall. Always secure mantel to wall studs.
- DO NOT place TV or other HEAVY objects on top of this product.
- NEVER let children climb or hang on this product.
- DO NOT use this product outdoors.

Parts

<p>③ M6×5/8"</p>  <p>Bolt 6PCS</p>	<p>⑤ 4mm</p>  <p>Allen Key 1PC</p>	<p>⑥ ϕ16mm ×1/4"</p>  <p>Flat Washer 6PCS</p>	<p>⑦ ϕ11mm ×1/4"</p>  <p>Spring Washer 6PCS</p>
<p>⑧ #8×5/8"</p>  <p>Screw 4PCS</p>	<p>⑨ #8×1-1/2"</p>  <p>(Flat Head Screw) 11PCS</p>	<p>⑭ 90×40×35mm</p>  <p>2PCS</p>	<p>⑮ 1160×80×60mm</p>  <p>1PC</p>

Instructions


1. Fasten wall mount bracket (15) to the bottom of the mantel.

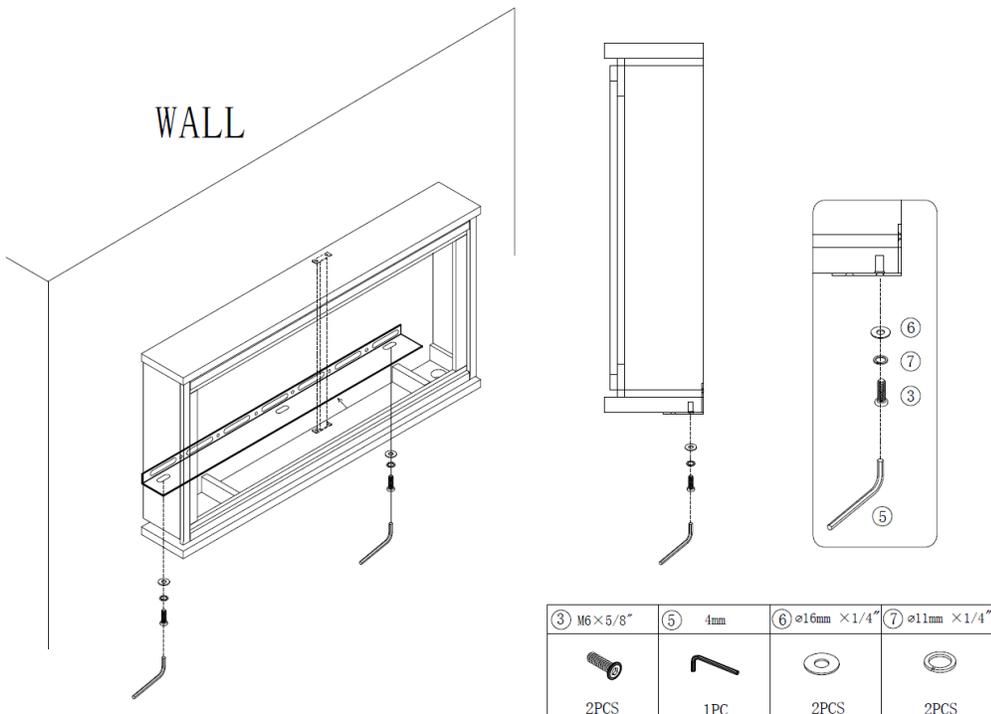

Securing Mantel to Wall – cont

2. With the help of another person, place the mantel on the wall in the location that you would like to mount the mantel. Fasten the wall bracket to the wall, securing the bracket to at least 2 wall studs. The round holes and slotted holes in your bracket should line up with your wall studs. If you use a circular hole, use a flat head screw (9). If you use a slotted hole, use a round head screw (10).


NOTE: For safety, do not mount directly into drywall only. Please fasten the wall bracket to 2 or more wall studs.

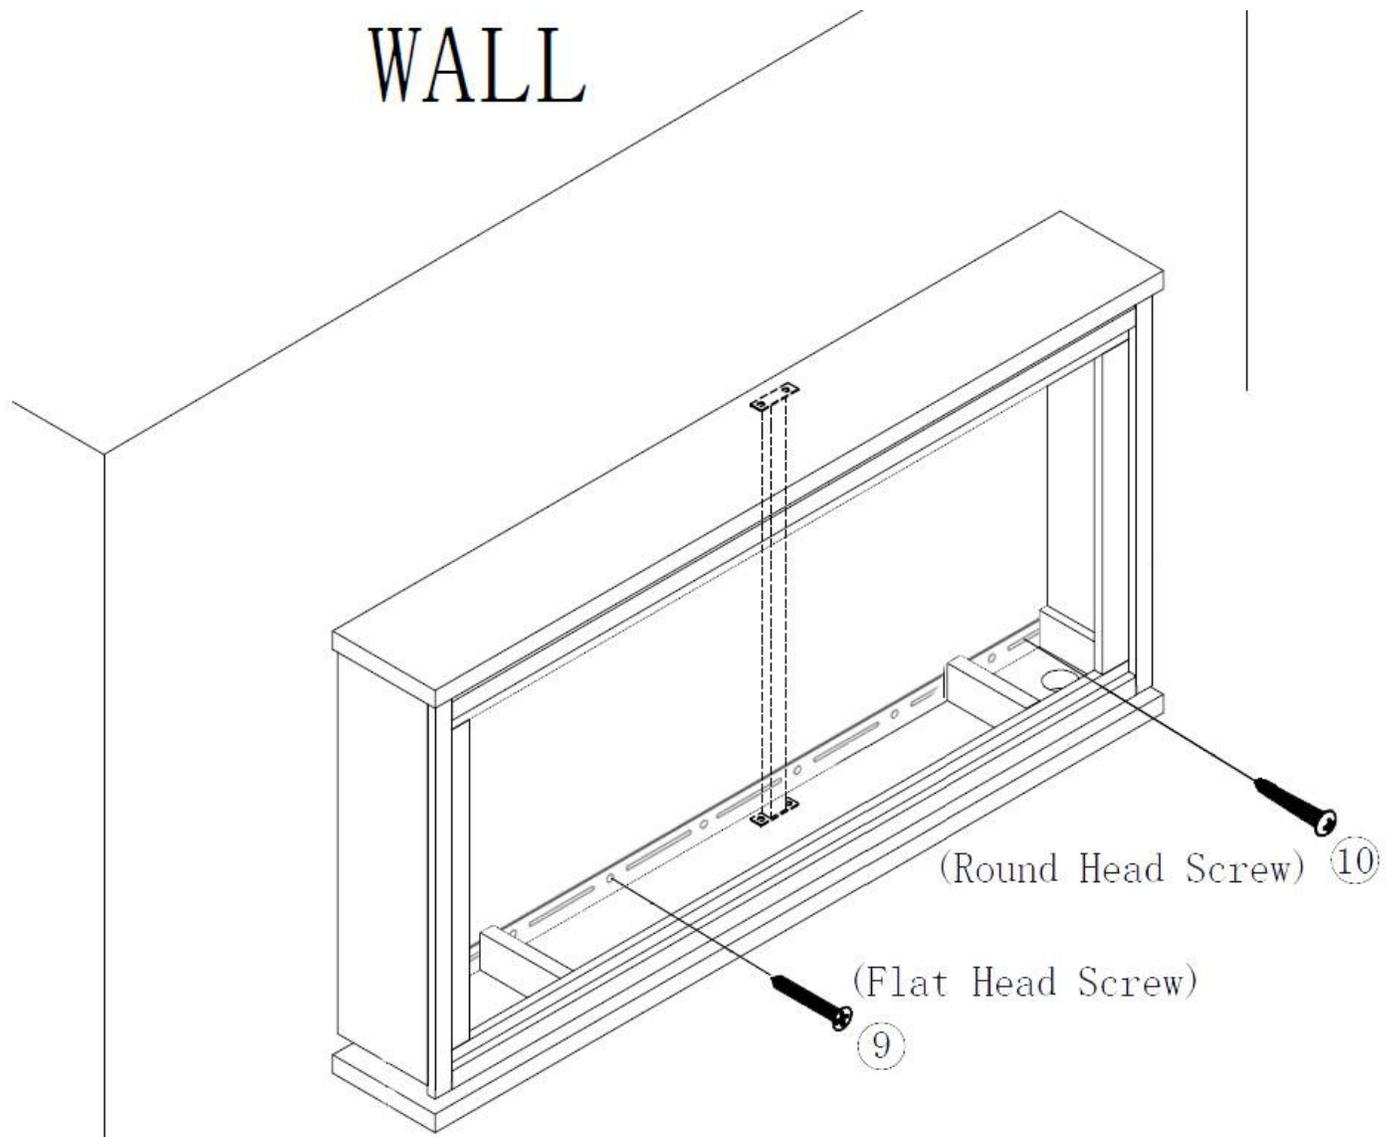

Securing Mantel to Wall – cont

- Once the mantel is fastened to the wall with the wall mount bracket, fasten the 2 L brackets (14) to the wall and the top of the mantel to secure the mantel to the wall.

NOTE: For safety, do not mount L brackets (14) directly into drywall only. Please fasten the L brackets (14) to 2 wall studs as shown below.

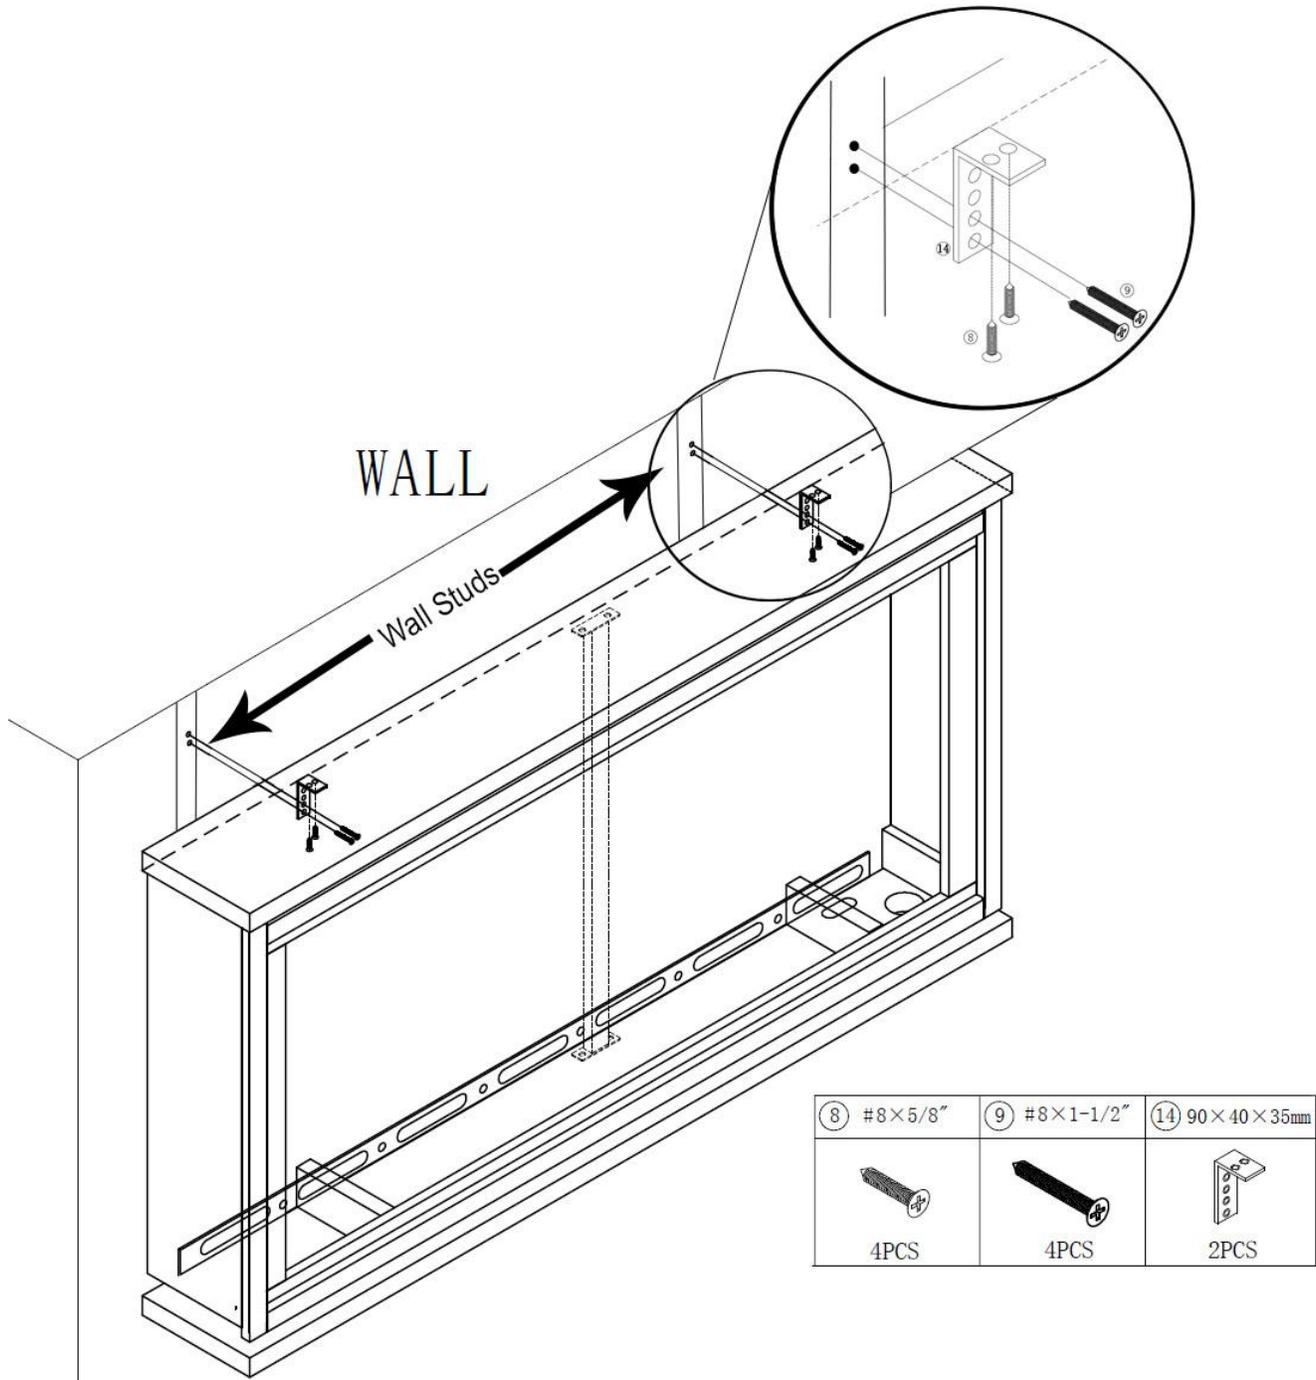

Installation of Fireplace In Encase Surround Mantel

The Touchstone Encase Surround Fireplace Mantels support mounting the following Touchstone Home Products Electric Fireplaces:

Surround Mantel SKU	Touchstone Fireplace Supported
90017	80004

Before installing the fireplace in the mantel, please remove the rubber feet off the bottom of the fireplace. For instructions on removing the rubber feet, please check your fireplace's installation manual.

For installing the fireplace in the mantel, please go to the Recessed Installation section of your fireplace's user manual and follow the instructions for recessing the fireplace into a wall. This is the same procedure for installing the fireplace in the Encase Surround Mantel.

Warranty

Touchstone Home Products Limited Warranty

Touchstone Home Products®, Inc offers a one (1) year limited warranty on all Encase Surround Fireplace Mantels (see your Touchstone Home Products Electric Fireplace user manual for warranty information on the electric fireplace). The one (1) year warranty starts on the date of purchase and expires 1 calendar year from the original date of purchase.

Touchstone does not warrant its products against damage caused by third parties.

The warranty does not cover paint scratches, cosmetic blemishes, or other normal wear and tear associated with the cabinet.

Touchstone Home Products® will not be responsible for installation, labor, or any other expenses related to the reinstallation of a warranted part, and such expenses are not covered under warranty.

Conditions and Limitations

Touchstone Home Products®, Inc warrants our Encase Surround Mantel to be free of defects in material and workmanship to the original purchaser only. Registering your warranty is not necessary. Just provide your proof of purchase along with the model fireplace to make a warranty claim.

Warranty coverage begins on the date of purchase.

The factory warranty is non-transferrable.

Touchstone Home Products®, Inc does not cover damages caused by abuse, accident, alterations, lack of maintenance, misuse, or neglect. Parts installed from other manufacturers will void the warranty.

Touchstone Home Products®, Inc does not warrant its products against damage caused by third parties.

The warranty does not cover paint scratches, cosmetic blemishes, dents, corrosion, or other normal wear and tear. The Encase Surround Mantel is not for outdoor use. Damage to Encase Surround Mantel due to water, weather damage, long periods of dampness, condensation, damaging chemicals or cleaners are not covered under warranty.

Touchstone Home Products limited warranty does not cover accidental breakage.

STOP CALL US FIRST! STOP
DO NOT RETURN TO STORE.

For immediate help with assembly, product information,
or if your product arrives damaged, call our toll-free number at

800-215-1990

or email:

customerservice@thpus.com

Our staff is ready to provide assistance.

Affix Serial Number Label Here