


Lubricating Flame Rod – AudioFlare Series Fireplace

Tools Needed:


- Phillips Screwdriver
- White Lithium Grease


Instructions

1. Turn Off AudioFlare Fireplace.
2. Remove glass panel from fireplace and remove fireplace from wall.
3. Remove the screws from the rear of the fireplace.

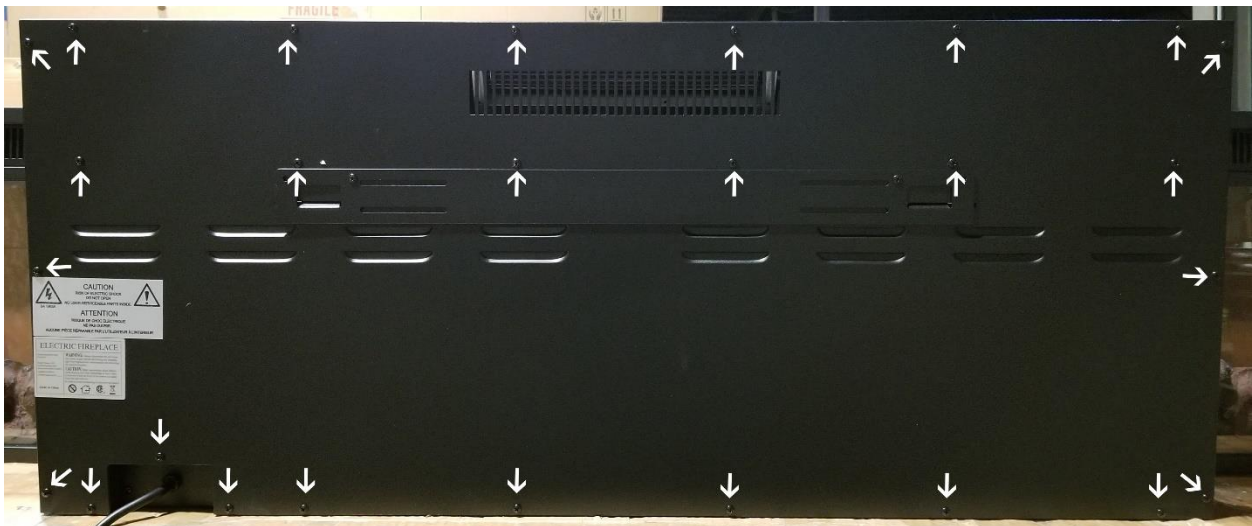


4. After removing the back panel, locate the grommet that holds the end of the flame rod in place.

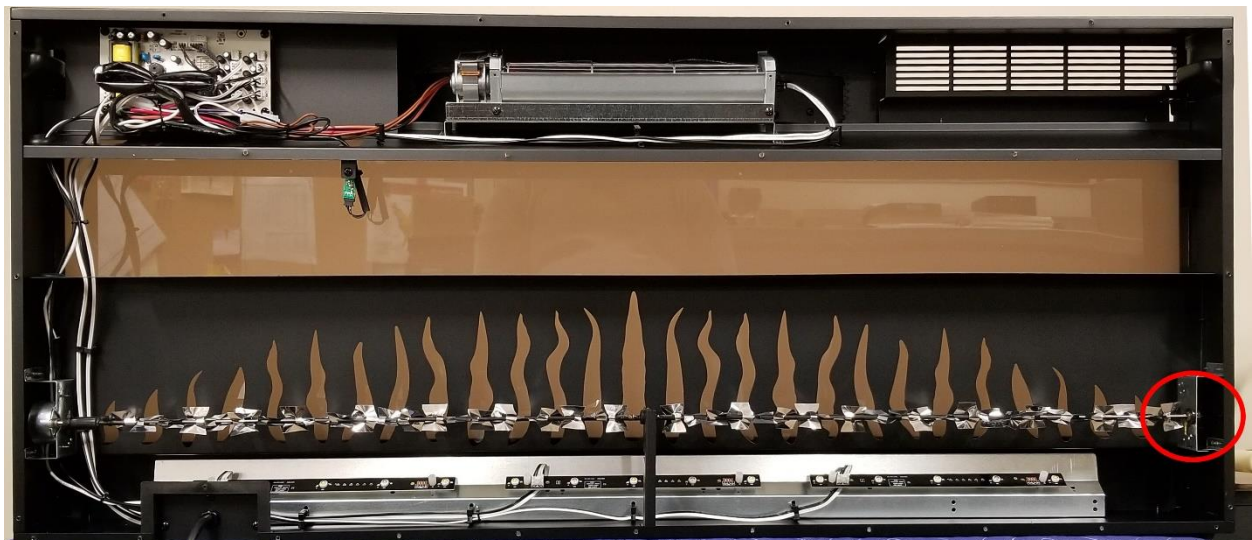

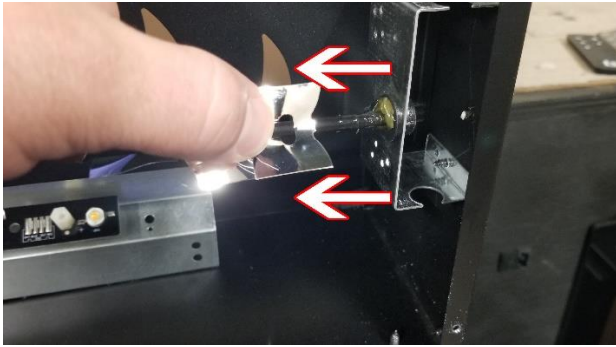


a. Slide Flame rod to left to remove from grommet

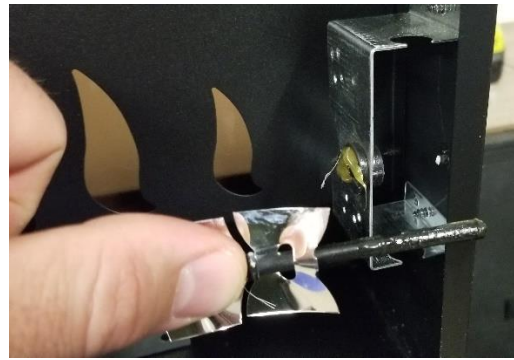


b. Flame rod removed from grommet


5. With the flame rod removed from grommet, clean the existing lubrication from the flame rod and flame rod grommet.

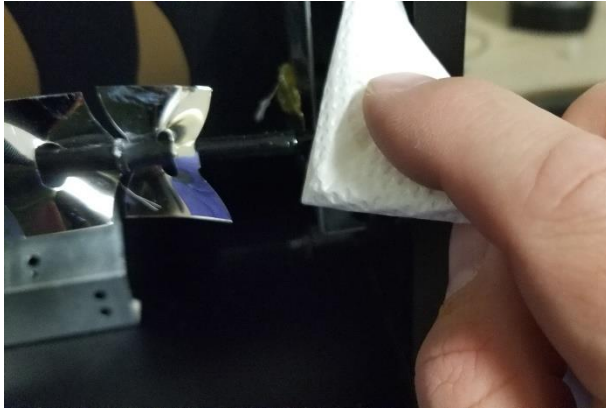


6. Place new White Lithium Grease in end flame rod grommet as shown below.

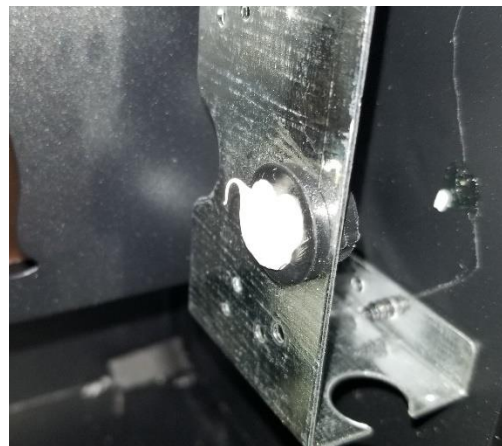

7. Reinstall end of flame rod back in flame rod grommet.

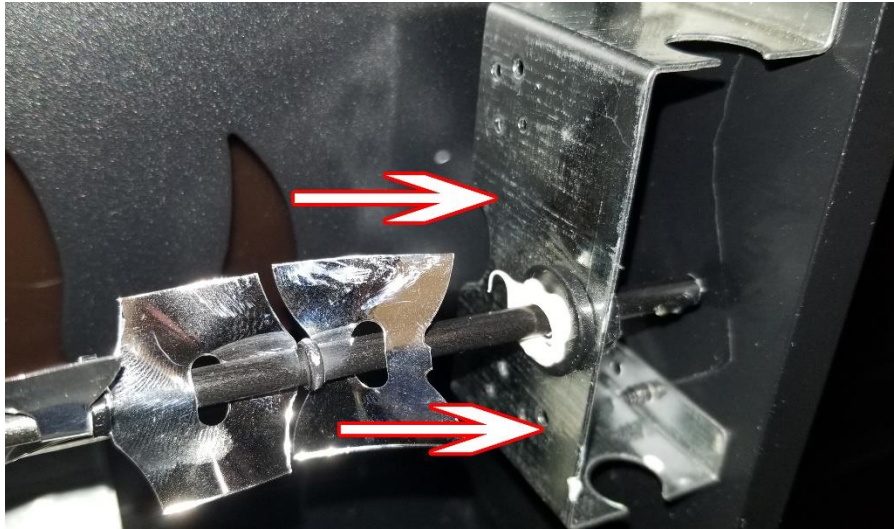

8. When satisfied, reinstall the back panel and test the fireplace.

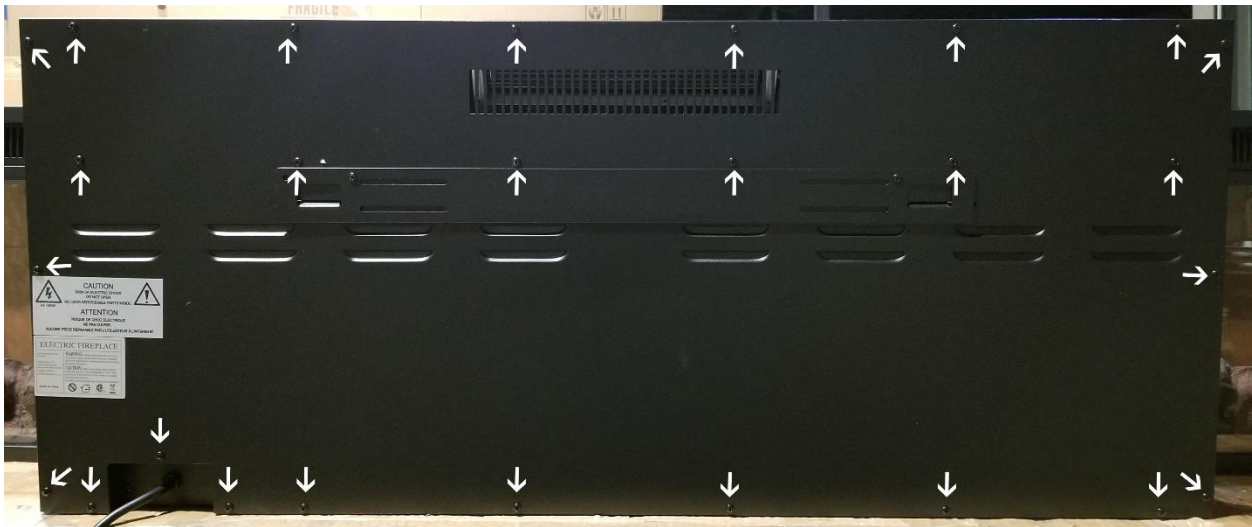

****If you have any questions, contact the technical support department at Touchstone Home Products at 800-215-1990 option 3.**