


Lubricating Flame Rod in Chesmont Fireplace

Tools Needed:


- Phillips Screwdriver
- White Lithium Grease (available at Home Depot or Lowe's)

Instructions

1. Turn Off Chesmont Fireplace and unplug the power cable from the outlet.
2. Remove the fireplace from the wall.
3. Remove the screws shown below to remove the back panel from the fireplace.

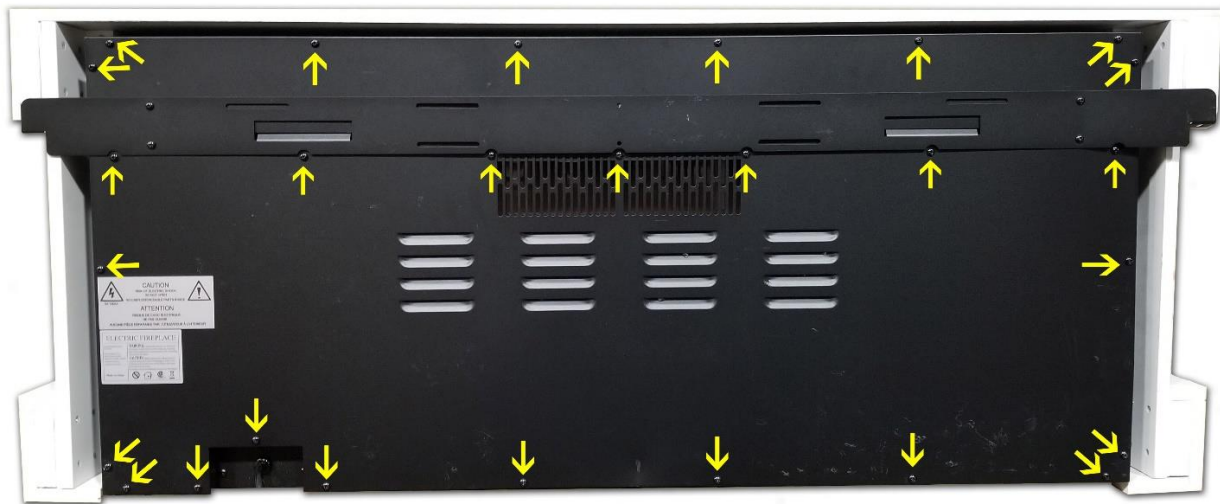


4. Once the back panel is removed, you will have access to the flame rod.

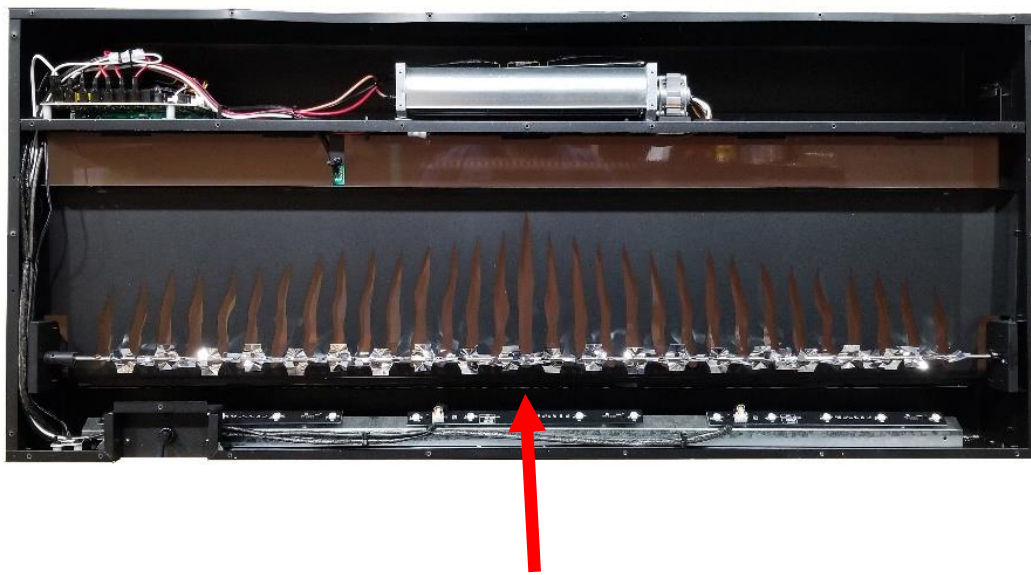


Flame Rod

4. After removing the back panel, locate the grommet that holds the end of the flame rod in place.


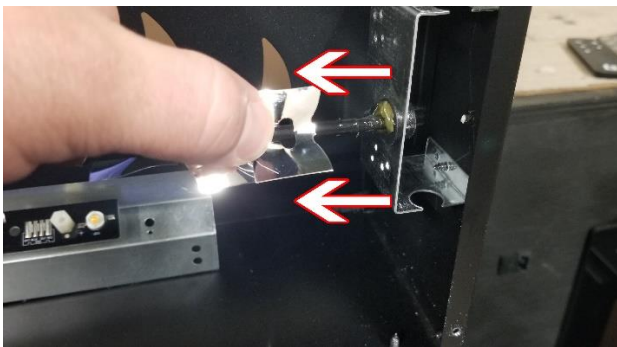


a. Slide Flame rod to left to remove from grommet

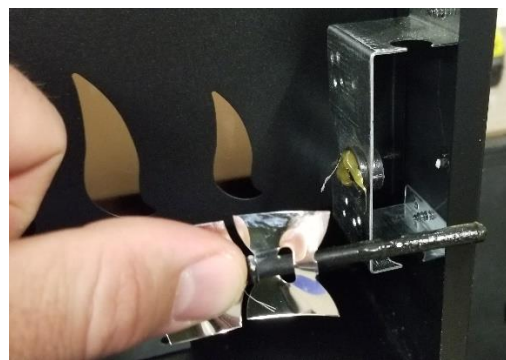


b. Flame rod removed from grommet


5. With the flame rod removed from grommet, clean the existing lubrication from the flame rod and flame rod grommet.

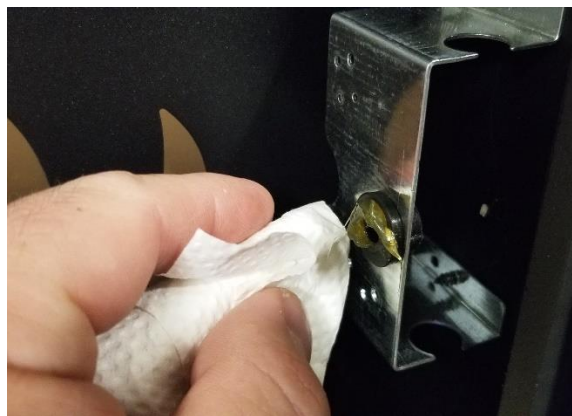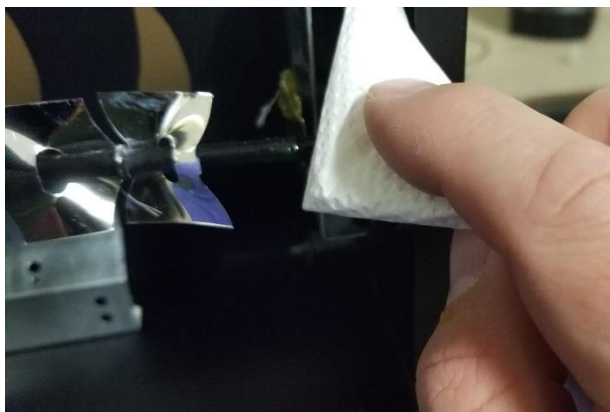


6. Place new White Lithium Grease in end flame rod grommet as shown below.

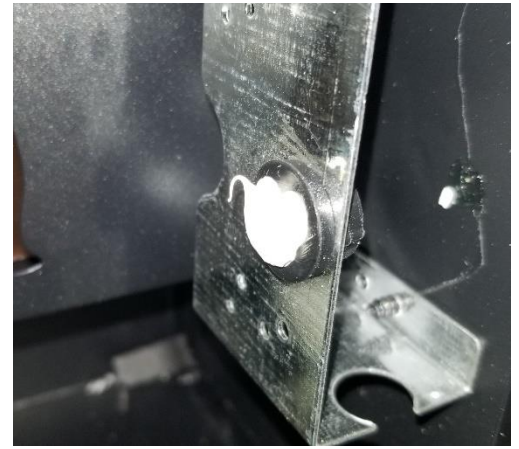

7. Reinstall end of flame rod back in flame rod grommet.

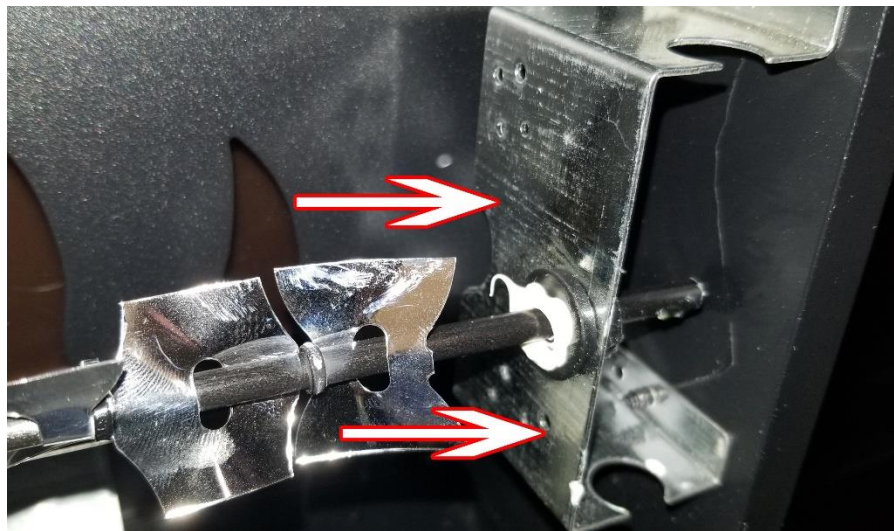

8. When satisfied, reinstall the back panel and test the fireplace.

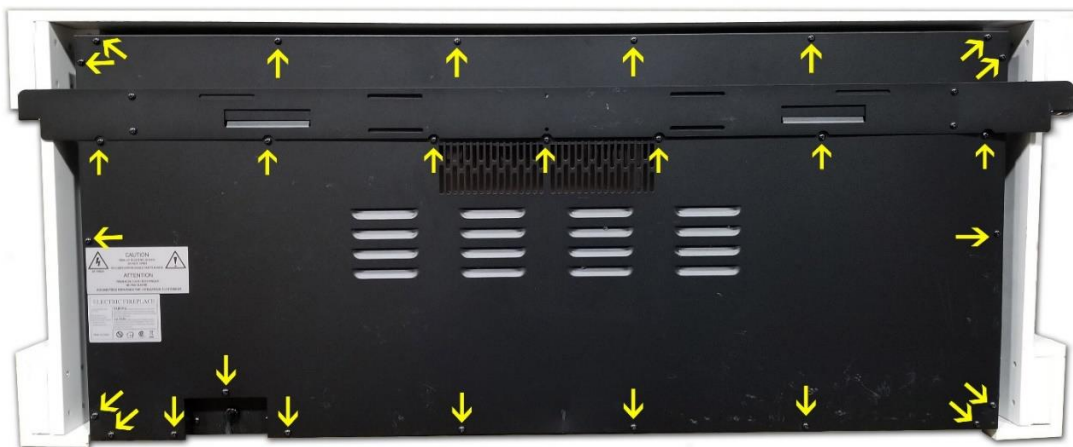

****If you have any questions, contact the technical support department at Touchstone Home Products at 800-215-1990 option 3.**