


Reinstalling Flame Rod in Chesmont Fireplace

Tools Needed:


- Phillips Screwdriver

Instructions

1. Turn Off Chesmont Fireplace and unplug the power cable from the outlet.
2. Remove the fireplace from the wall.
3. Remove the screws shown below to remove the back panel from the fireplace.

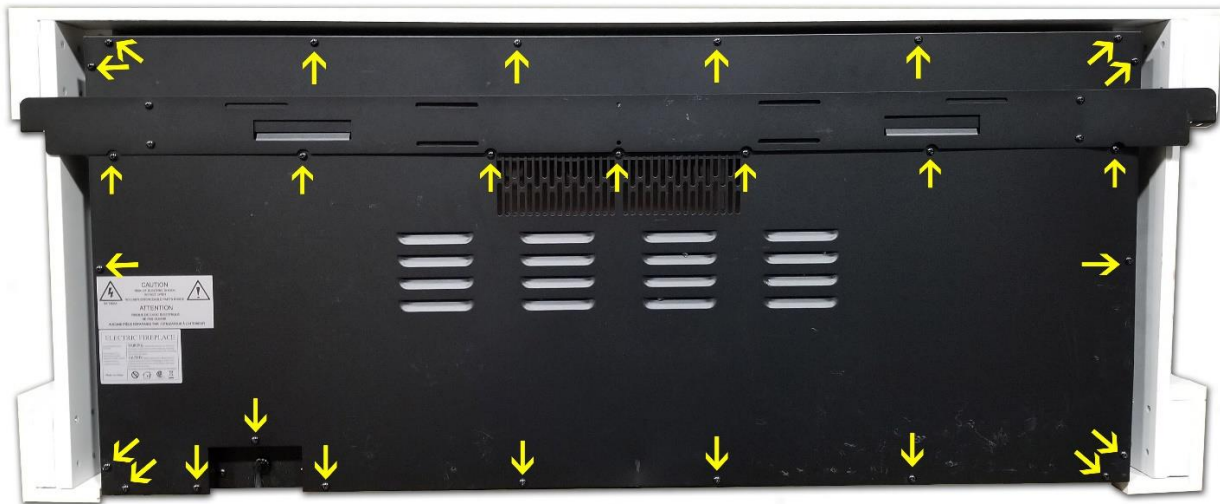

4. Once the back panel is removed, locate the flame rod and check to be sure the flame rod is in its socket.

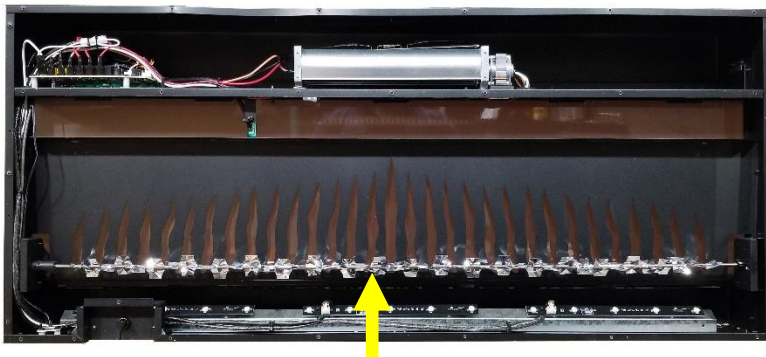

Flame Rod



Flame Rod Socket

5. If the flame rod is out of the socket, please reinstall the flame rod. Test the unit once complete.

****If you have any questions, contact the technical support department at Touchstone Home Products at 800-215-1990 option 3.**