


Removing Back Panel: Chesmont Fireplace

Tools Needed:


- Phillips Screwdriver

Instructions

1. Turn Off Chesmont Fireplace and unplug the power cable from the outlet.
2. Remove the fireplace from the wall.
3. Remove the screws shown below to remove the back panel from the fireplace.

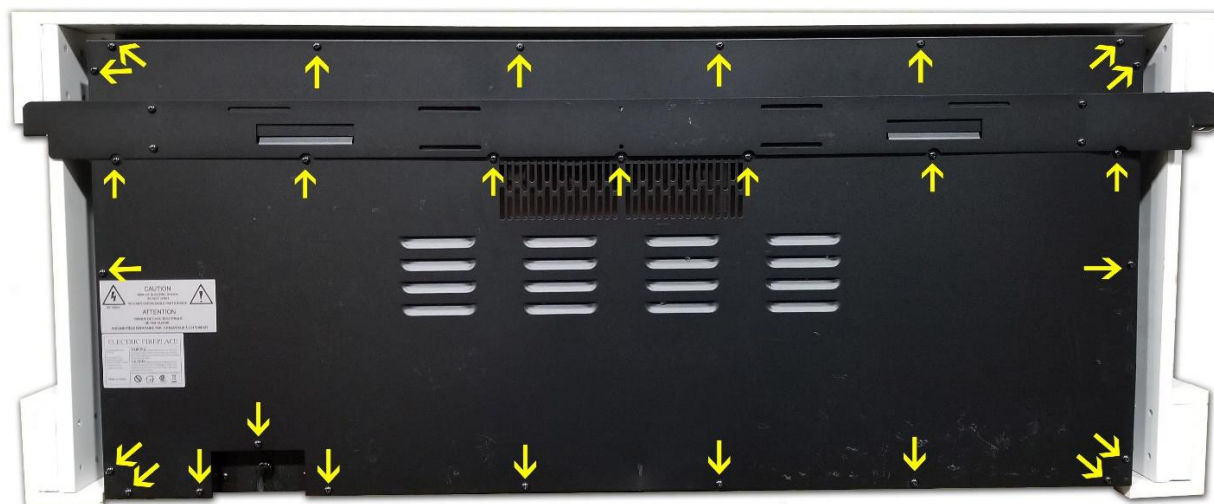

4. Once the back panel is removed, you will have access to the flame rod.

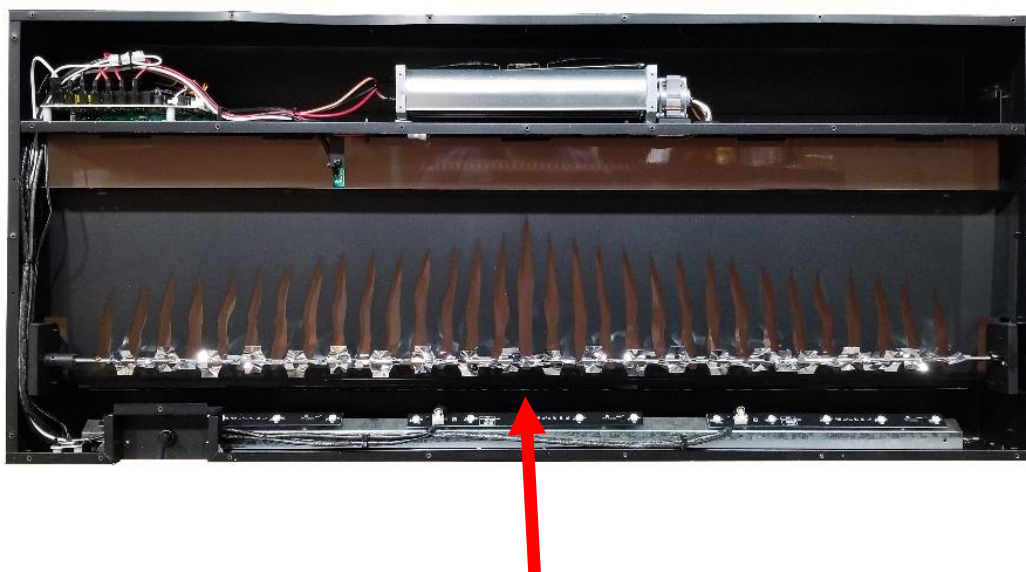

Flame Rod