

Checking IR Remote Remote Receiver Wire in Sideline Fireplace

Tools Needed:

- Philips-Head Screwdriver

Instructions:


1. Unplug the power cable for the fireplace unit and remove from the wall.
2. Remove the glass panel from the front of the Sideline Fireplace.
3. Remove the top panel on the Sideline Fireplace. The top panel of the Sideline Fireplace is held on with 14 total screws (2 on the top left, 7 on the back top of the fireplace, 2 on the top right, and 3 on the very top). See pictures of the screw locations below:



Remove 2 screws on left side of fireplace



Remove 2 screws on right side of fireplace

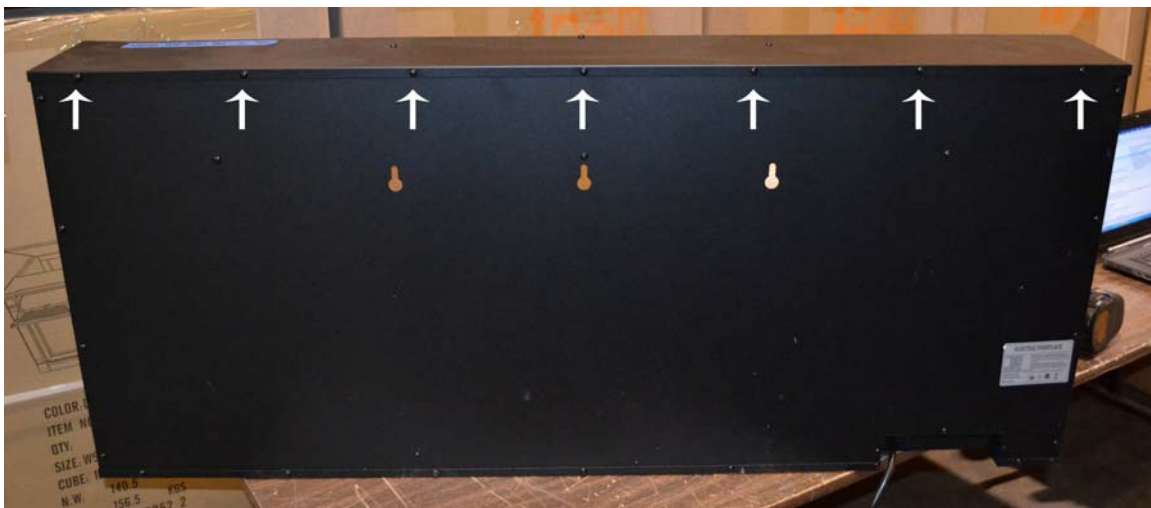


Remove 7 screws on rear panel of fireplace

3. Continued:



Remove 3 screws on top of fireplace

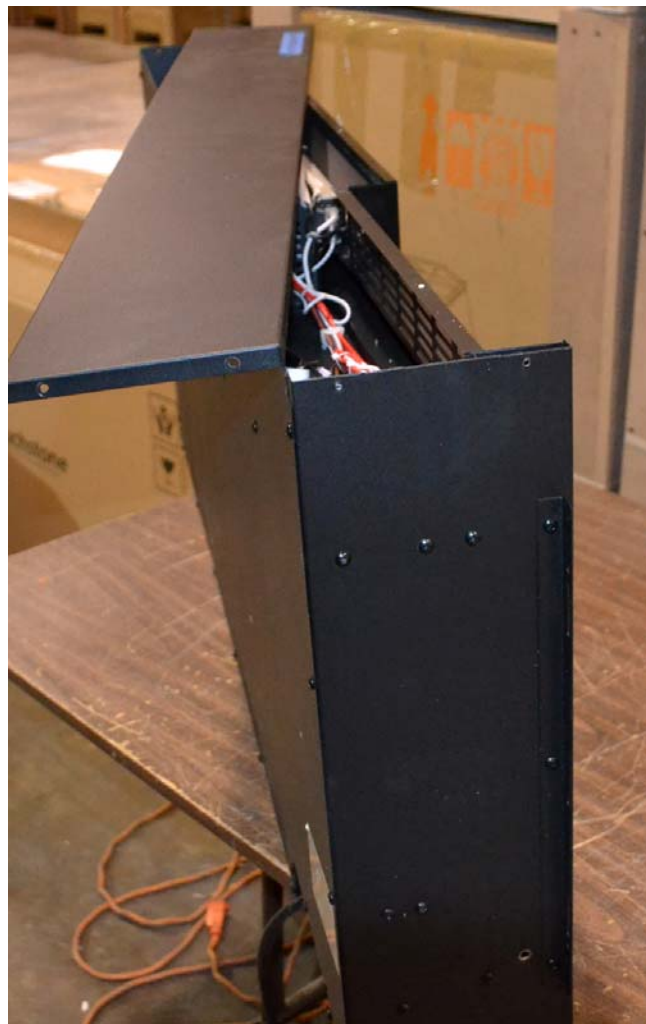

Remove top panel from fireplace

4. After removing the top, locate the control board for the Sideline Fireplace. The control board is on the left side of the unit, when facing the front of the fireplace (the picture below shows the location of the control board when looking at the back of the fireplace)



The arrow in the picture above points to the cable for the IR Remote Receiver

5. Check the cable for the IR Remote Receiver to ensure that it is plugged into the control board. The cable for the IR Remote Receiver is a small ribbon cable. There is an arrow pointing to the cable below.



6. If the cable is unplugged, plug in the cable. Once the cable is plugged in, plug in the fireplace and test the remote. If the remote now works, reattach the top panel on the Sideline Fireplace and the glass panel. Hang unit back on wall when satisfied.

***** If you have any questions, don't hesitate to call
Touchstone Technical Support Department at 800-215-1990 option 2.*****