

## Lubricating Flame Rod in ValueLine Series Electric Fireplace

### *Tools Needed:*


- Phillips Screwdriver
- Oatey Hi-temp Valve and Plumbers Grease or White Lithium Grease

### *Instructions*

1. Turn Off ValueLine Fireplace
2. Remove glass panel from fireplace and remove fireplace from wall.
3. If you have not already, remove the wall mount bracket from the back of the fireplace.  
To remove the wall mount bracket, remove the 3 screws securing the bracket to the top of the fireplace.



4. Remove the screws from the rear of the fireplace. The picture below shows the 80018 ValueLine 60" Fireplace. For units smaller than 60", there will be less screws, but they will all be in the same general location as the arrows below. For units larger than 60", there will be more screws.

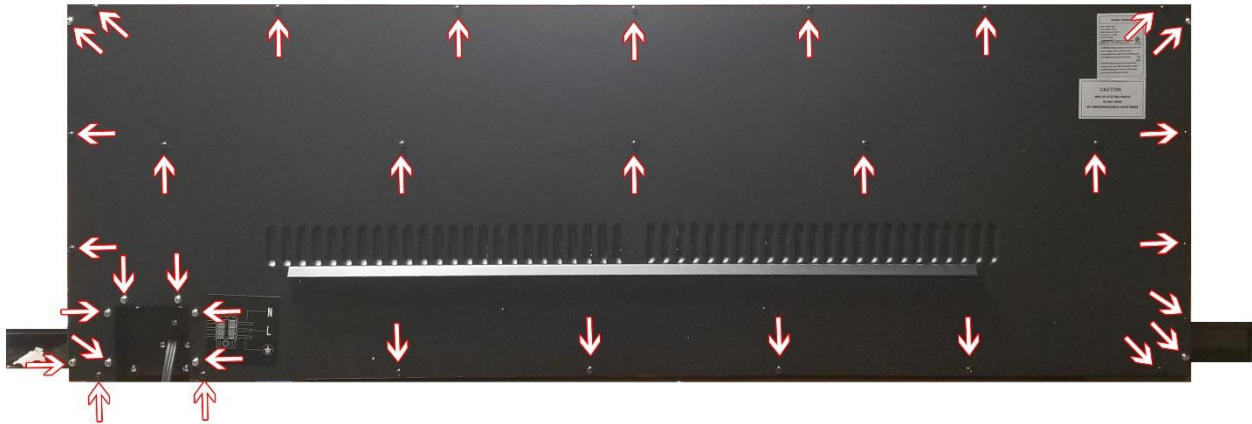


5. After removing the back panel, locate the 3 grommets that hold the flame rod in place.




6. Lubricate the 3 grommets starting from left to right, ending with grommet on the opposite side of the flame motor.


Left grommet:

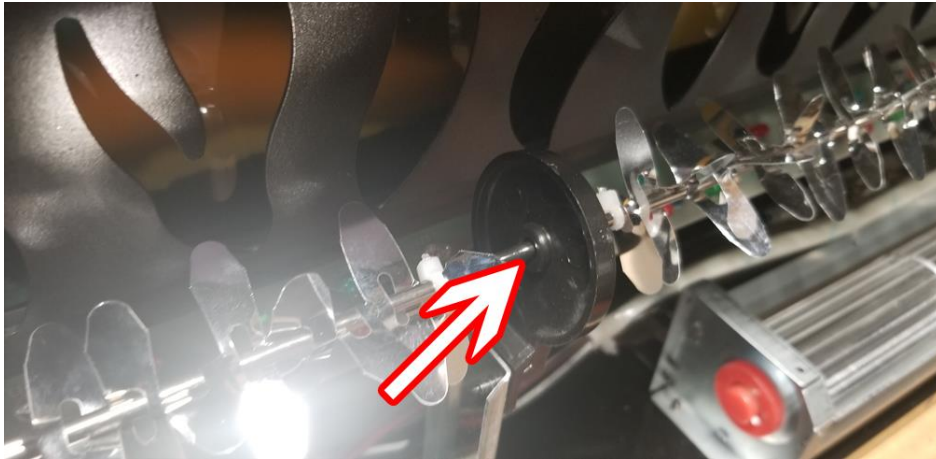


Middle grommet:

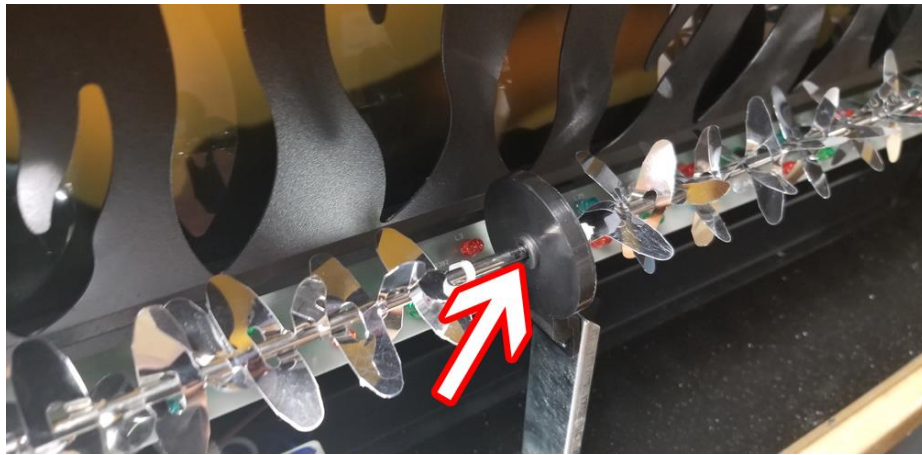

Right side grommet:

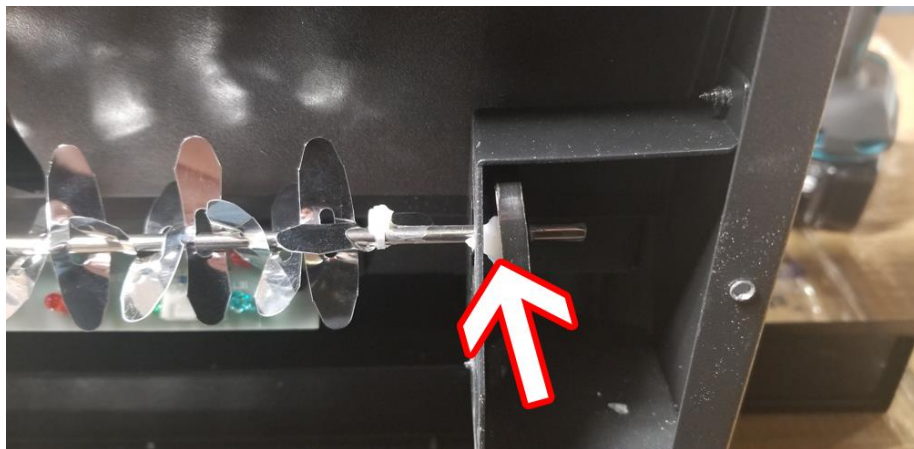

7. Once lubricated, plug in the fireplace and run the flames only to test to see if the noise is still there. When satisfied, reinstall the back panel and test the fireplace.

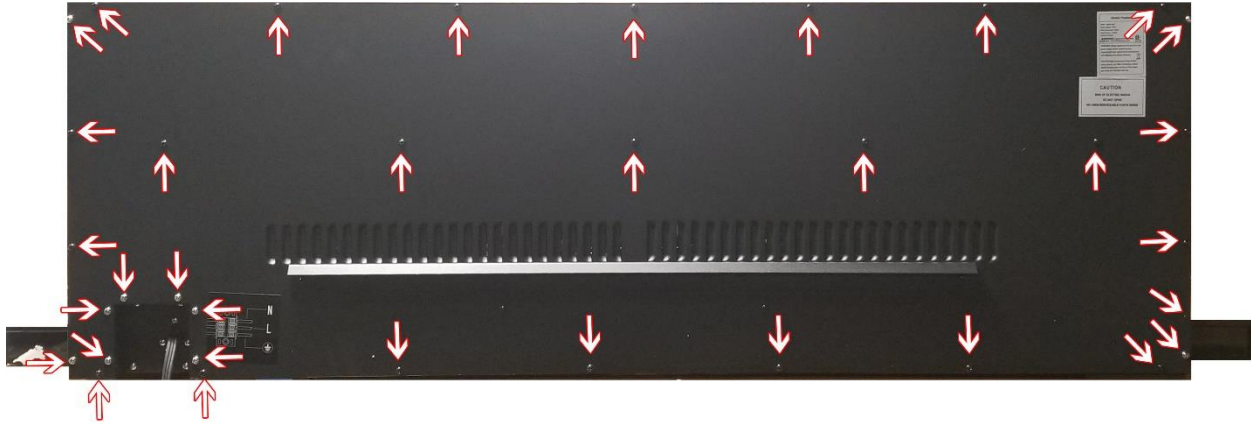

**\*\*If you have any questions, contact the technical support department at Touchstone Home Products at 800-215-1990**