


## Reinstalling Flame Rod in Onyx/Ivory Fireplace

### *Tools Needed*

- Phillips-head Screwdriver

### *Instructions*

1. Turn off fireplace and unplug fireplace from wall.
2. Remove fireplace from wall bracket.
3. Remove glass panel (see instructions for Removing Glass Panel)
4. Remove top panel from fireplace. To remove top panel, remove the following screws:
  - a. Remove 2 screws on left side of fireplace

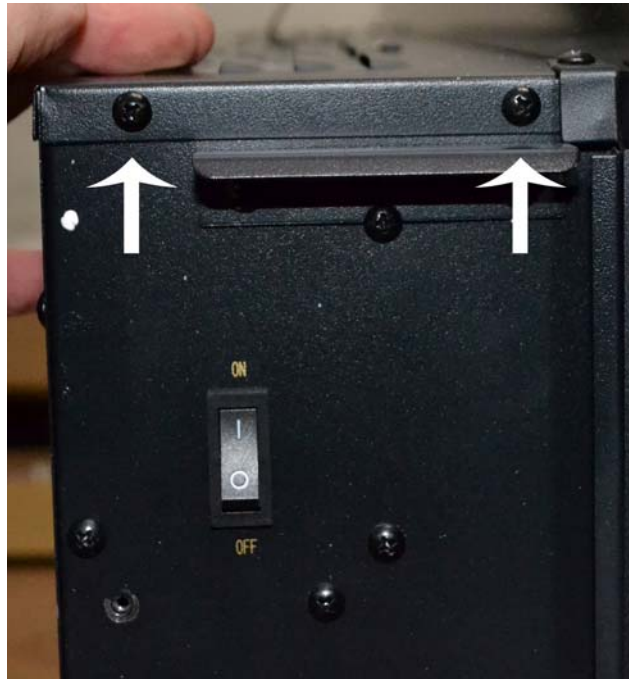

- b. Remove 2 screws from top of fireplace



4. Remove top panel – cont.


c. Remove 2 screws on right side of fireplace



d. Remove 6 screws where the top panel attaches to the back of the fireplace.




5. After removing the top panel, remove the 16 screws holding the back panel to the fireplace.

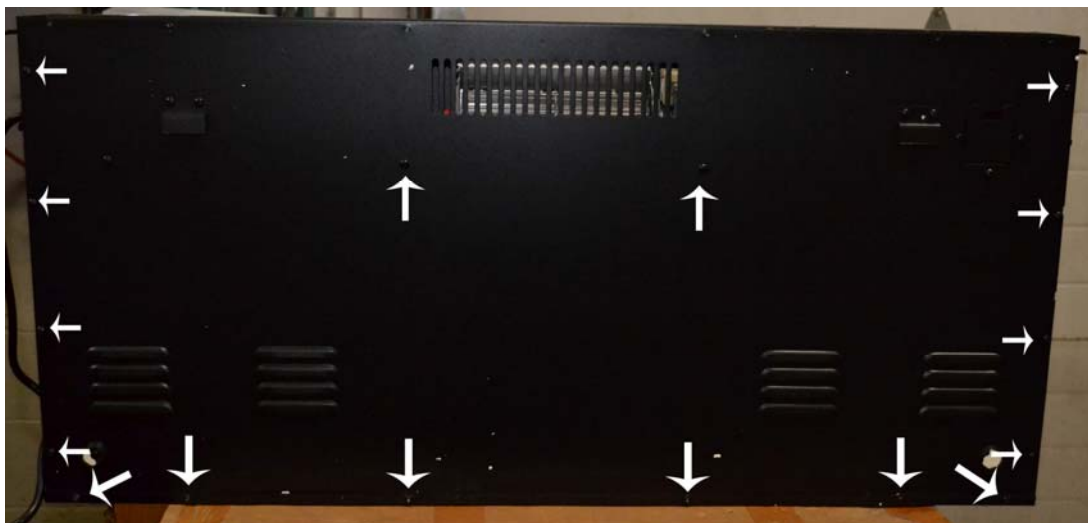


6. Remove the back panel from the fireplace.

**\*\*Note:** The back panel cannot be fully removed due to the heat disable switch, slide the back panel to the side so that you have access to the flame rod behind the panel.

7. You will notice that the flame rod is out of its socket.

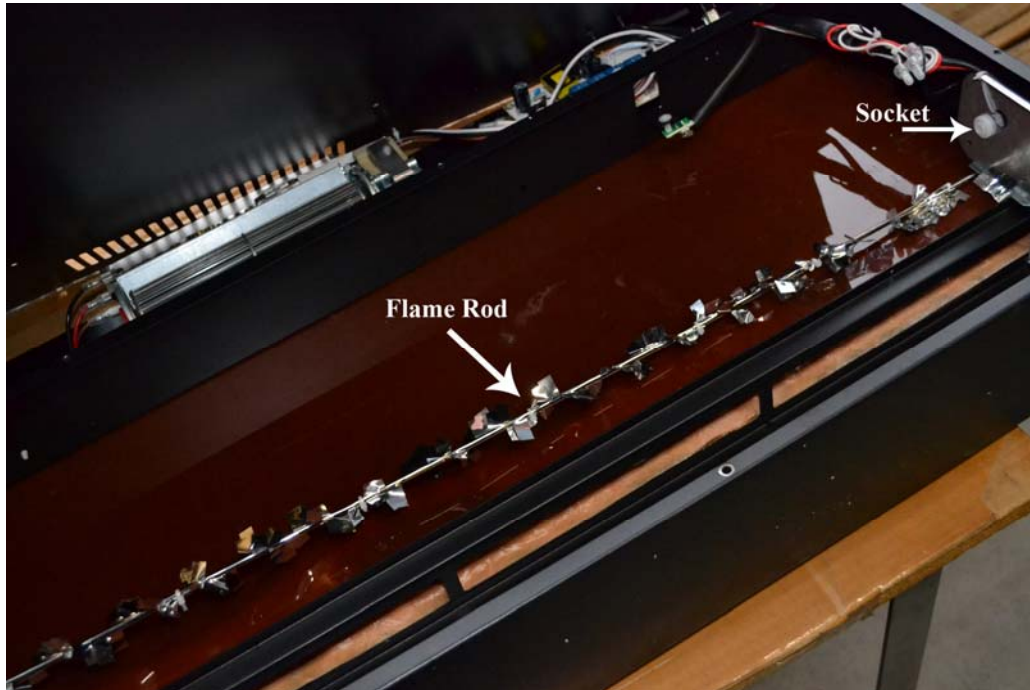

8. Bend the rod and place the flame rod back into the socket.

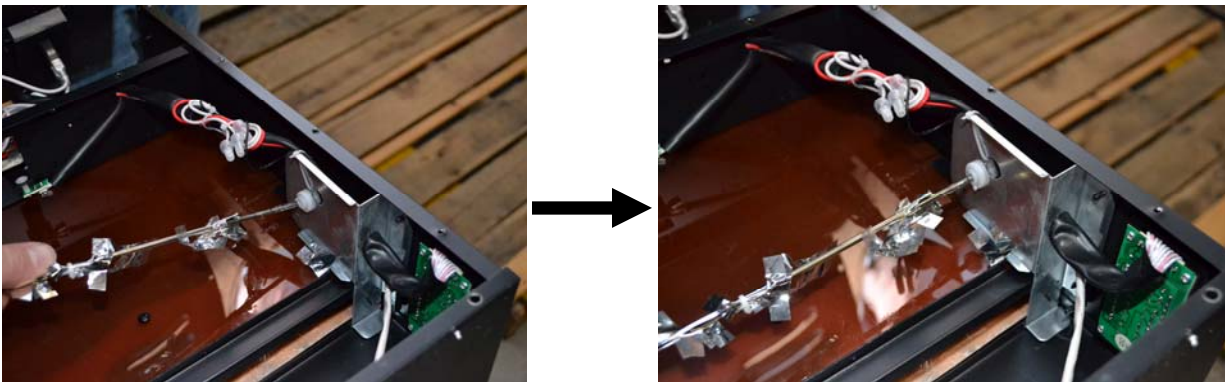

9. After reinstalling the flame rod. Reinstall the back panel on the fireplace.

10. Reinstall the top panel

11. Test fireplace before hanging fireplace back on wall and installing glass panel.

**\*\*If you have any questions, contact the technical support department at Touchstone Home Products at 800-215-1990 option 2.**