

Programming Wireless Remote Control with Whisper Lift II

Tools Needed:

- Paper Clip

Instructions:

1. On the control box, there will be a hole to the right of the work KEY.



2. With a straightened out paper clip, push it into the hole and hold for 3 seconds until the indicator light flashes twice and turns on solid red.



3. Press any button on the wireless remote to match the remote with the control box. If you are successful, the red light on the control box will turn off. If the pairing fails, the indicator light will flash 4-5 times.