

REPLACING ACTUATOR MOTOR

Replacing Actuator Motor – Whisper Lift II TV Lifts

Replacing Actuator Motor

Tools Needed:


- Pliers
- Screwdriver
- Hammer

Parts Needed During This Step:

- Whisper Lift II TV Lift
- Whisper Lift II Actuator Motor

Instructions:

1. Remove TV from lift.
2. Put the Whisper Lift II in the down position, if possible.
3. Remove Whisper Lift II from TV Cabinet.
**** Note:** If you cannot lower the lift, leave the lift in the UP position.
4. Locate actuator motor on back of Whisper Lift II.

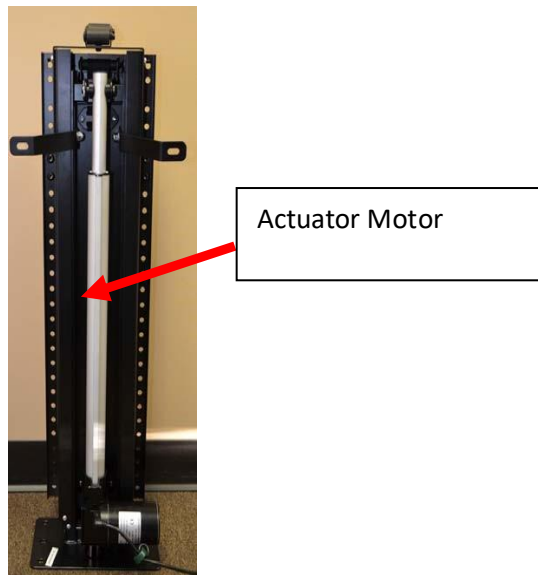

****Note:** If you cannot lower the lift, lay the lift on its face on the floor and remove the actuator in this position.

REPLACING ACTUATOR MOTOR

Replacing Actuator Motor – cont.

5. Remove the top cotter pin and locking pin that attaches to the actuator motor to the Whisper Lift II body.



a. Remove top cotter pin



b. Remove top locking pin

6. Remove the bottom cotter pin and bottom locking pin that attaches to the actuator motor to the Whisper Lift II body.



a. Remove bottom cotter pin



b. Remove bottom locking pin

REPLACING ACTUATOR MOTOR

Replacing Actuator Motor – cont.

7. Put the new actuator motor in place so that the motor portion of the actuator is facing to the right.



8. Put the bottom locking pin and cotter pin back in place.



a. Install bottom locking pin



b. Install bottom cotter pin


REPLACING ACTUATOR MOTOR

Replacing Actuator Motor – cont.

9. Line up the hole in the top of the actuator motor with the mount on the back of the Whisper Lift II body and install the top locking pin and cotter pin.



a. Install top locking pin

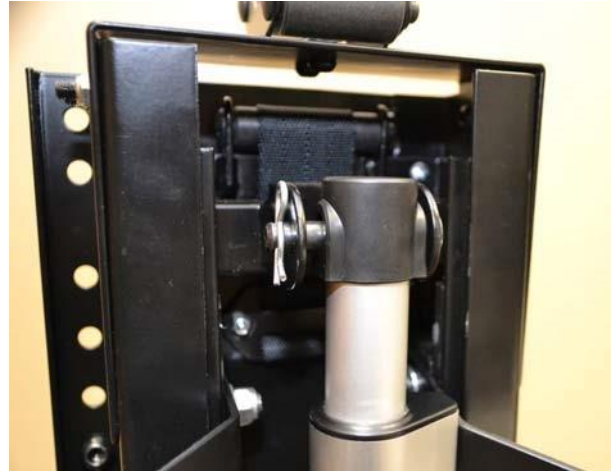

b. Install top cotter pin

10. You can now install the lift back in the cabinet.