


Initializing the Whisper Lift II

Before operating the lift, the lift needs to be initialized. To initialize the lift, please follow the procedure listed below:

1. Press and **HOLD** the UP and DOWN button on the wired remote control together at the same time until the red light on the top of the control box starts to flash.

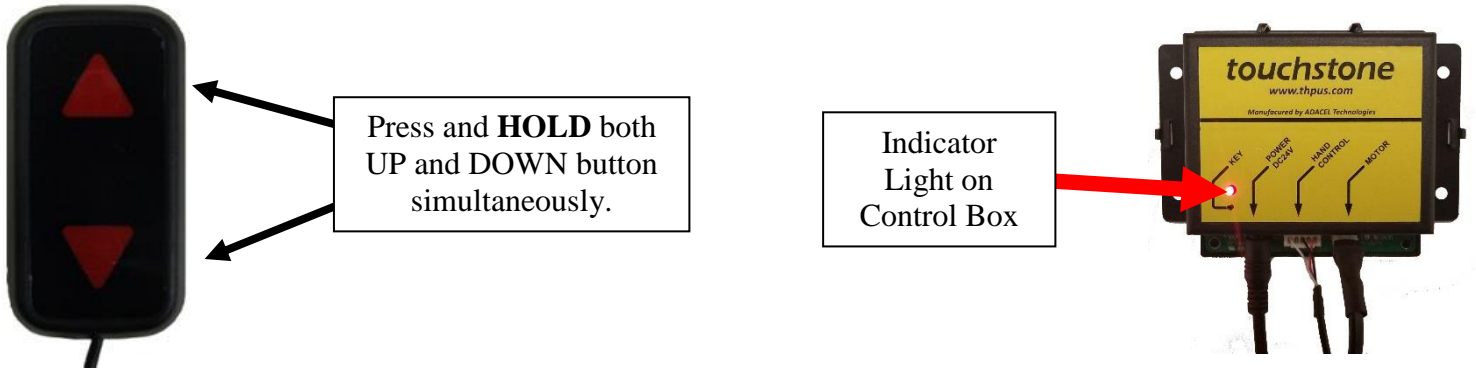

2. Release the UP and DOWN button and the indicator light on the top of the control box will flash 3 times and turn off. The lift will go all the way to the bottom, back up the top and all the way down to the bottom again. The red light on the control box will come back on when the initialization procedure is complete.

***Note: Do not proceed until this procedure is complete.*