


Whisper Lift II PRO Advanced TV Lift Features

Initialize the Whisper Lift II PRO Lift

PLEASE RUN INITIALIZATION PROCEDURE WHEN FIRST OPERATING LIFT AFTER SETUP!

Before you run the Whisper Lift II PRO Lift, you will need to initialize the Control box. To initialize the control box, you will need to do the following:

1. Press and HOLD the UP and DOWN button on the wired remote control together at the same time until the red light on the top of the control box starts to flash.

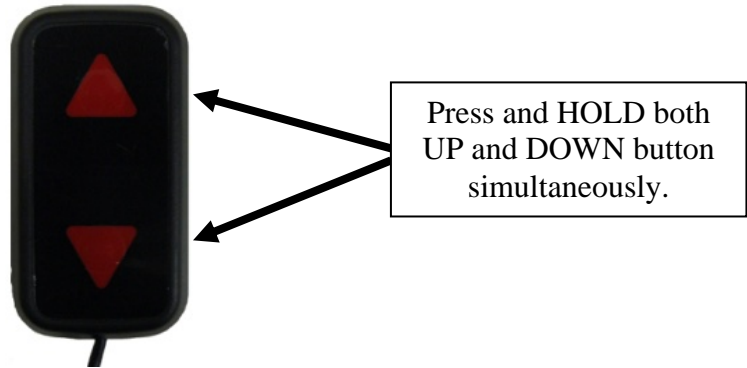

2. Release the UP and DOWN button and the indicator light on the top of the control box will flash 3 times and turn off. The lift will go all the way to the bottom, back up the top and all the way down to the bottom again. The red light on the control box will come back on when the initialization procedure is complete.

****Note:** *Do not proceed until this procedure is complete.*

The initialization process is now complete and you can now use your Whisper Lift II PRO!