


Whisper Lift II PRO Advanced TV Lift Features

Initialize the Whisper Lift II PRO Lift

Before you run the Whisper Lift II PRO Lift, you will need to initialize the Control box. To initialize the control box, you will need to do the following:

1. Press and HOLD the UP and DOWN button on the wired remote control together at the same time until the red light on the top of the control box starts to flash.

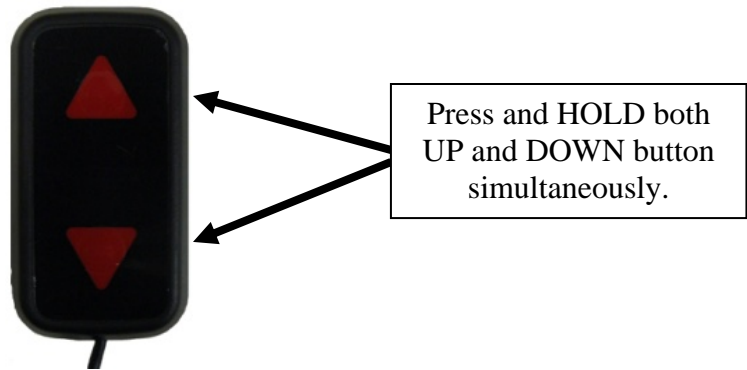

2. Release the UP and DOWN button and the indicator light on the top of the control box will flash 3 times and turn off. The lift will go all the way to the bottom, back up the top and all the way down to the bottom again. The red light on the control box will come back on when the initialization procedure is complete.

***Note: Do not proceed until this procedure is complete.*


The initialization process is now complete.

Whisper Lift II PRO Advanced TV Lift Features


Setting Lift Height

The Whisper Lift II PRO Lift has the ability to save a preset lift height. To set the lift height, you will need to do the following:

1. Press and HOLD the UP and DOWN button on the wired remote control together at the same time until the red light on the top of the control box starts to flash.

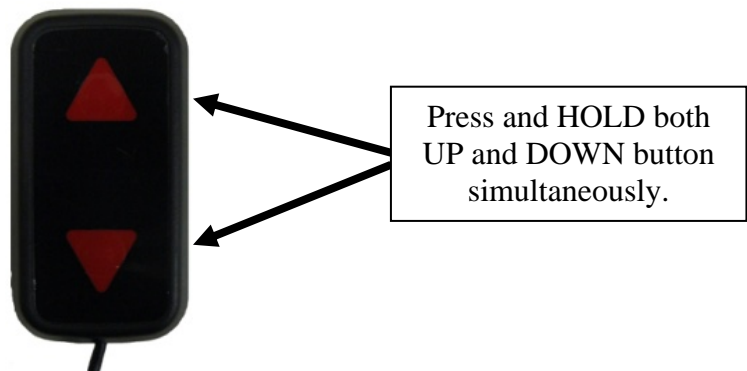

2. Release the UP and DOWN button and the indicator light on the top of the control box will flash 3 times and turn off. The lift will go all the way to the bottom and then start to go back up.
3. Once the lift raises to the desired height, press the UP button on the wired remote to STOP the lift. The lift will then pause and lower to the bottom.

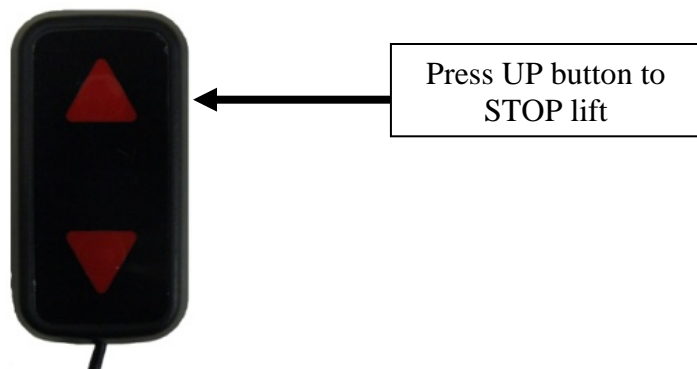

The MAX height on your Whisper Lift II PRO lift will now be set. To go to the set height, press UP button on either the wired or wireless remote control.