

IR Hex Codes – 32800, 33900

<b>Command</b>	<b>Code</b>
Extend Lift (UP)	0x40
Retract Lift (DOWN)	0xB0
Stop Lift	0x10
IR Connection Code	0x40F7