

Pairing Wireless RF Remote To Lift

1. Remove power from the lift
2. Grab the RF remote and hold in one hand.
3. Plug power back into the lift and within 5 seconds of applying power, press the UP button on the RF remote to pair the remote to the lift. If paired successfully, you will hear 2 sets of beeps, signifying that the remote is paired to the control box and lift.

The wireless RF remote control should now be operational.