

Touchstone How-To: Replacing a Lift Assembly

Tools Required:

- allen wrench

Instructions:

1. Remove the TV from the lift.

2. Remove the mounting bracket from the lift by unscrewing the 5 screws (4 that are visible and 1 that is under the roller assembly is holding the TV "L" bracket to the lift. You will need another person to help you with this process.



3. Remove the power cable for the lift from the wall or power strip/surge protector.

4. Remove the 2 lift actuator cables from the control box.

5. Remove the 8 bolts securing the lift to the cabinet (there are 4 at the top of the lift and 4 on the bottom of the lift)



6. Remove the lift from the cabinet (either you can lift it through the top of the cabinet or slide it out one of the rear access panels, if your cabinet has rear access panels).



7. Reinstall the lift in the cabinet, attaching the 8 bolts that you removed in step 4.



8. After reinstalling the lift in the cabinet, attach the communications cable to the control box and plug in the cabinet. Test the lift by pressing the UP button on the internal control to test the lift.

9. When satisfied, reinstall the mounting brackets and TV on the lift.