

Removing TV Lift L Bracket

Tools: allen wrench

Instructions:

1. Remove TV from lift.
2. Lower lift.
3. Remove roller assembly from top of lift (1A in fig 1)
4. Remove 5 screws holding L bracket in place (note: screw 5 is hidden by roller assembly in fig 1)
5. Lift L bracket and crossbracket assembly out through top of cabinet.

