


## **Accessing Control Board on Sideline Fireplace**

## Tools Needed:

- Phillips Screwdriver

## Instructions

- 1. Turn Off Sideline Fireplace.
- 2. Remove glass panel from fireplace and remove fireplace from wall.
- 3. Remove the screws from the rear of the fireplace. The picture below shows the 80004 Sideline 50 Fireplace. For units smaller than 50", there will be less screws, but they will all be in the same general location as the arrows below. For units larger than 50", there will be more screws.

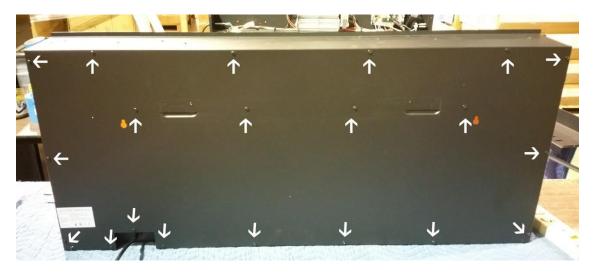



**Inside of Fireplace with Back Panel Removed**