


Replacing the flame panel on a Sideline Fireplace

Tools Needed:

- Phillips Screwdriver


Instructions

1. Turn Off Sideline Fireplace and disconnect from power.
2. Remove glass panel from fireplace and remove fireplace from wall.
3. Remove the screws from the rear of the fireplace. The picture below shows the 80004 – Sideline50 Fireplace. For units smaller than 50”, there will be less screws, but they will all be in the same general location as the arrows below. For units larger than 50”, there will be more screws.

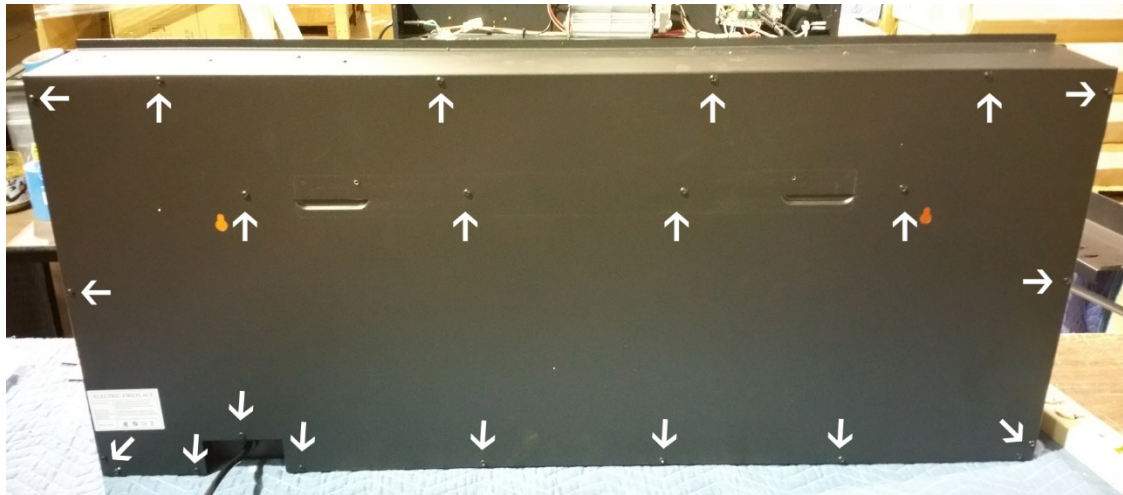

Inside of Fireplace with Back Panel Removed


4. Facing the back of the fireplace, remove these 3 screws from the right side of the fireplace to disconnect the flame rod.

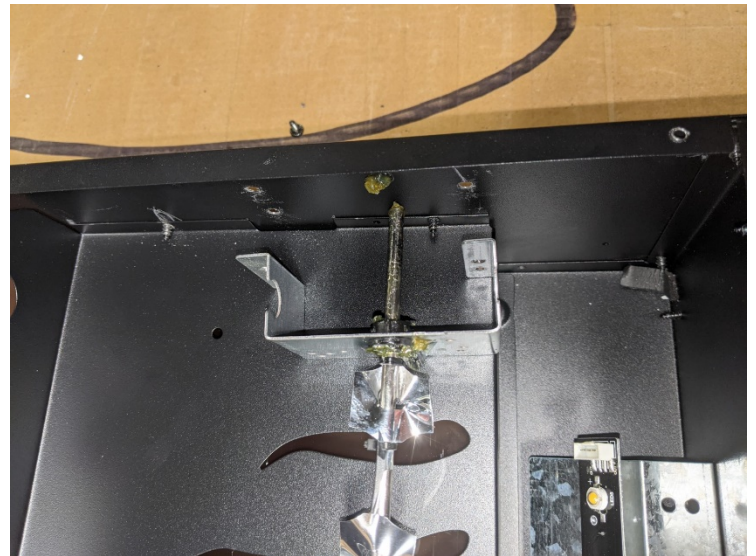


5. Remove the rest of the screws on the right side, except for the 4 screws around the handle.



6. Carefully slide out the flame panel.

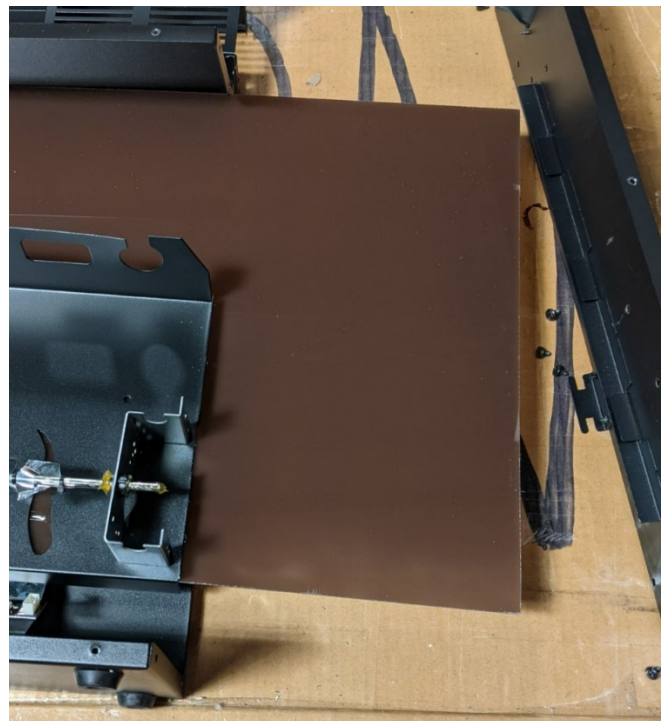

7. Carefully slide in the new flame panel with the glossy side facing up and make sure it is inserted between the flame panel brackets.

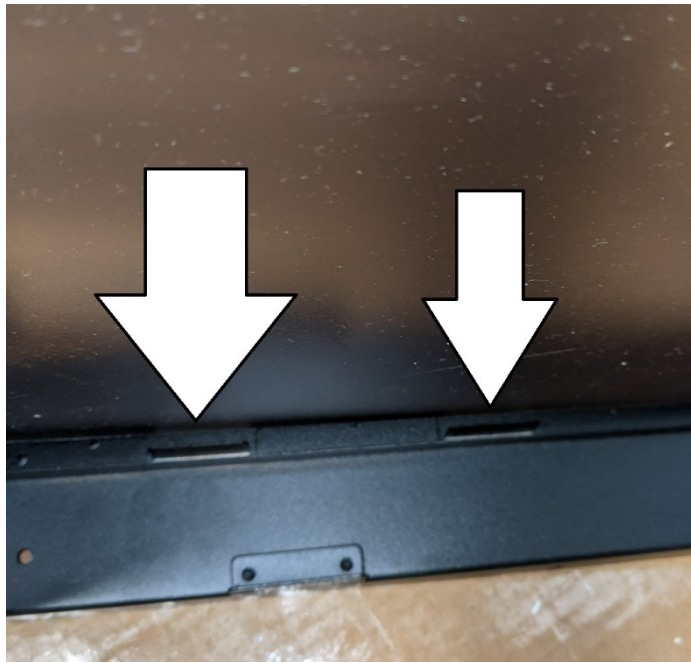

8. Once the new flame panel is in place reattach the flame rod.



9. Reattach of the right side of the fireplace by adding the rest of the screws. After that, reattach the back of the unit.

