
1. Remove all the screws on the back cover of product.

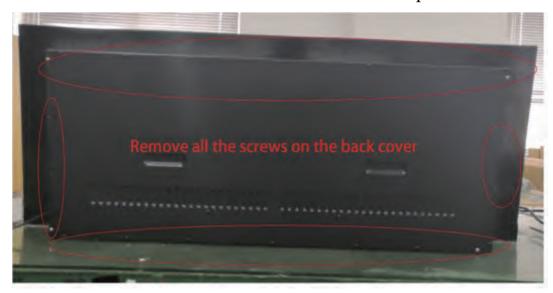





2. Remove the back cover.



3. Disconnect the three wires of HOT1, HOT2 and FAN as below.







Disconnect the three wire of HOT1,HOT2 and FAN.

4. Wrap the wires using electrical tape.





Wrap the three wires together using electrical tape.



5. Install the back cover and fix it using screws.

