## Instruction

How to switch One Touch Operation / Press & Hold Operation

## Step 1

Press and hold "M" button on wired controller, until display "1Un", then release.

## Step 2


Click "UP" or "DOWN" button to get "8Hc", then press "M" button to get current operation mode.

## Step 3

Click "UP" or "DOWN" button to select which mode do you want, then press " M" button for confirmation. Finished.

"001" is mean Press & Hold Operation mode.

"002" is mean One Touch Operation mode.

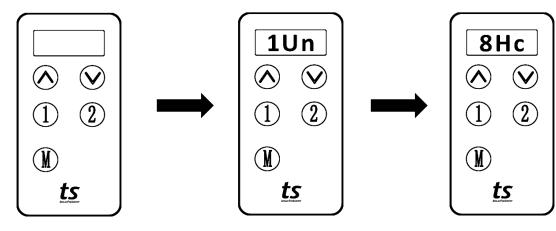

**Noted:** This change is only for RF remote control.