

## Setup and Operating the Whisper Lift II – cont

### Pairing Wireless Remote to Lift

#### *Tools Needed:*


- Paper Clip

#### *Instructions:*

1. On the control box, there will be a hole to the right of the word KEY.



2. With a straightened out paper clip, push the paper clip into the hole and hold for 3 seconds until the indicator light on the control box turns OFF.

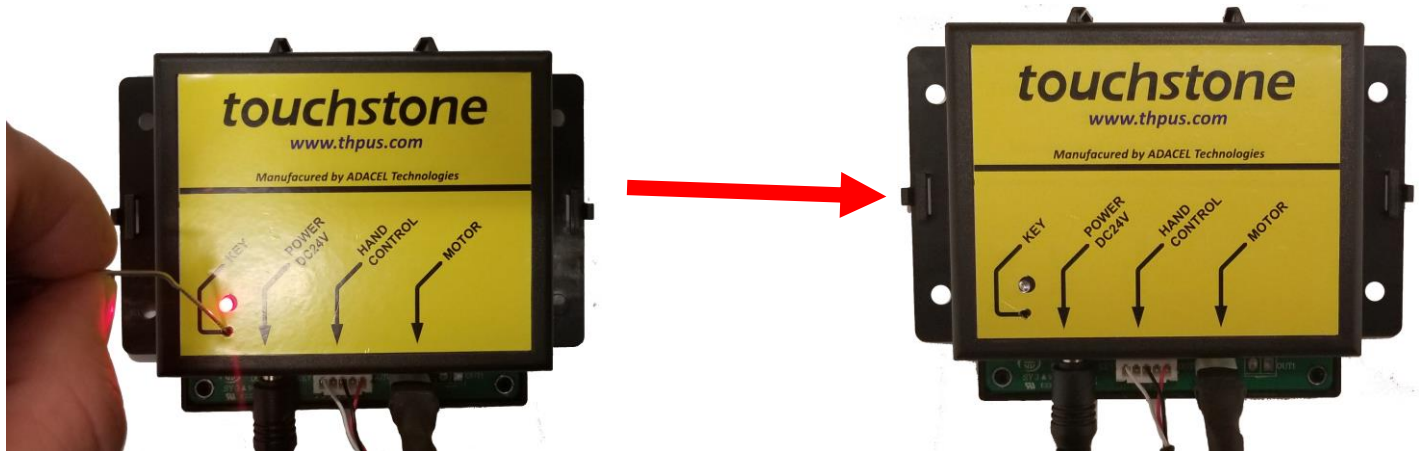

3. Press any button (UP, DOWN, or STOP) on the WIRELESS REMOTE to pair the remote control to the control box. If you are successful, the red light on the control box will flash 3 times and turn ON solid RED. The wireless remote control is now paired to the lift.